

STM32G4 Nucleo-64 boards (MB1367)

Introduction

The STM32G4 Nucleo-64 boards based on the MB1367 reference board (NUCLEO-G431RB, NUCLEO-G474RE, NUCLEO-G491RE) provide an affordable and flexible way for users to try out new concepts and build prototypes with the STM32G4 series microcontrollers, choosing from the various combinations of performance, power consumption, and features. The ARDUINO® Uno V3 connectivity and the ST morpho headers provide an easy means of expanding the functionality of the Nucleo open development platform with a wide choice of specialized shields. The STM32G4 Nucleo-64 boards do not require any separate probe as they integrate the STLINK-V3E debugger/programmer. The STM32G4 Nucleo-64 boards come with the comprehensive free software libraries and examples available with the STM32CubeG4 MCU Package.

Figure 1. NUCLEO-G474RE top view


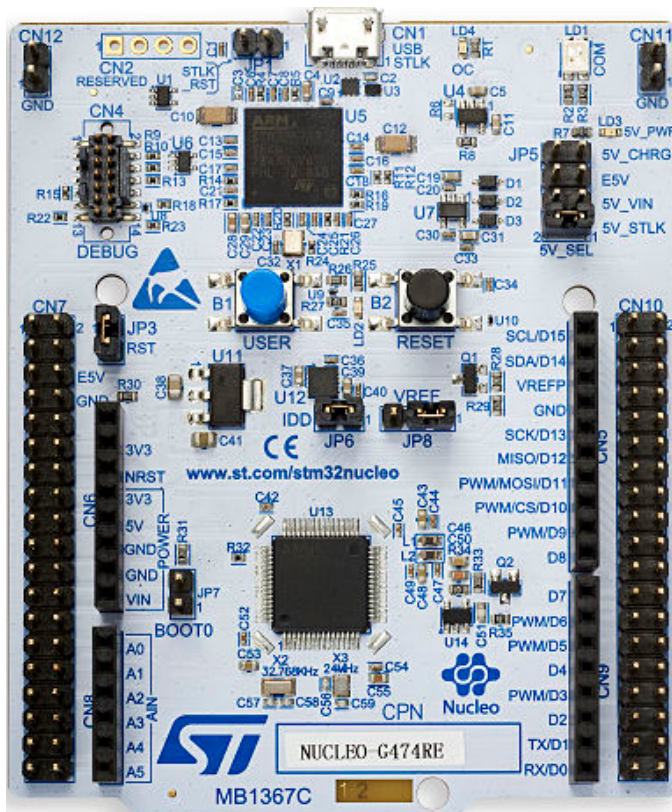


Figure 2. NUCLEO-G474RE bottom view

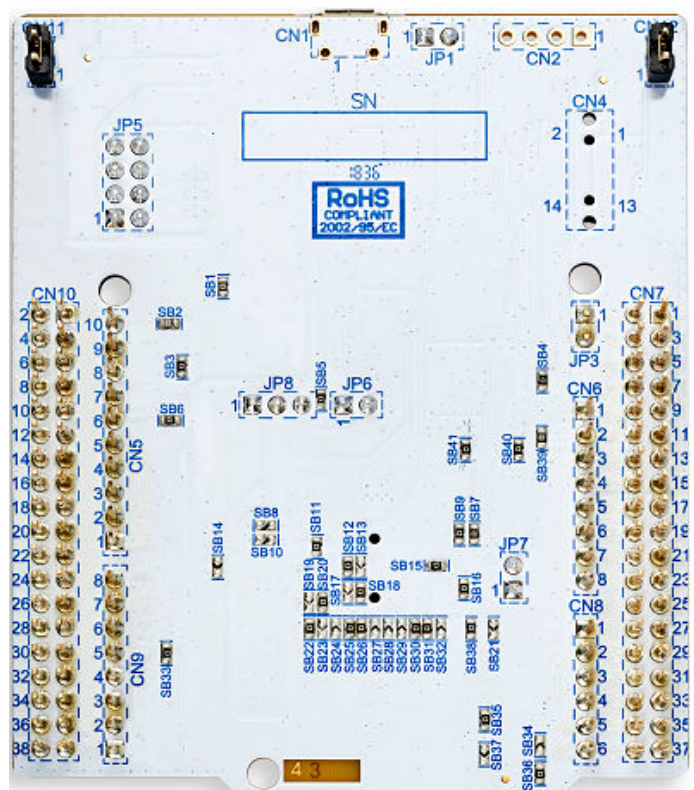

Pictures are not contractual.

1 Features

- STM32G4 microcontroller (Arm® Cortex®-M4 at 170 MHz) in an LQFP64 package featuring:
 - 128 Kbytes of flash memory and 32 Kbytes of SRAM for STM32G431RBT6
 - 512 Kbytes of flash memory and 96 Kbytes of SRAM for STM32G491RET6
 - 512 Kbytes of flash memory and 128 Kbytes of SRAM for STM32G474RET6
- Fully compatible with STM32G473RET6 (512 Kbytes of flash memory and 128 Kbytes of SRAM)
- 1 user LED
- 1 user and 1 reset push-buttons
- 32.768 kHz LSE crystal oscillator
- 24 MHz HSE on-board oscillator
- Board connectors:
 - USB Micro-AB
 - MIPI® debug connector
 - ARDUINO® Uno V3 expansion connector
 - ST morpho extension pin headers for full access to all STM32G4 I/Os
- Flexible power-supply options: ST-LINK USB V_{BUS} , USB connector, or external sources
- On-board STLINK-V3E debugger/programmer with USB re-enumeration capability: mass storage, Virtual COM port, and debug port
- Comprehensive free software libraries and examples available with the STM32CubeG4 MCU Package
- Support of a wide choice of Integrated Development Environments (IDEs) including IAR Embedded Workbench®, MDK-ARM, and STM32CubeIDE

arm

Note: *Arm and Cortex are registered trademarks of Arm Limited (or its subsidiaries or affiliates) in the US and/or elsewhere.*

The Arm word and logo are trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere. All rights reserved.

2 Ordering information

To order an STM32G4 Nucleo-64 board, refer to [Table 1](#). Additional information is available from the datasheet and reference manual of the target STM32.

Table 1. List of available products

Order code	Board reference	Target STM32
NUCLEO-G431RB	MB1367 ⁽¹⁾	STM32G431RBT6
NUCLEO-G474RE		STM32G474RET6
NUCLEO-G491RE		STM32G491RET6

1. Subsequently called main board in the rest of the documentation.

2.1 Codification

The meaning of the codification is explained in [Table 2](#).

Table 2. Codification explanation

NUCLEO-G4XXRY	Description	Example: NUCLEO-G474RE
G4	MCU series in STM32 32-bit Arm Cortex MCUs	STM32G4 series
XX	MCU product line in the series	STM32G474xx MCUs belong to the STM32G4x4 product line
R	STM32 package pin or ball count: • R for 64 pins	64 pins
Y	STM32 flash memory size: • B for 128 Kbytes • E for 512 Kbytes	512 Kbytes

3 Development environment

3.1 System requirements

- Multi-OS support: Windows® 10 or 11, Linux® 64-bit, or macOS®
- USB Type-A or USB Type-C® to Micro-B cable

Note: macOS® is a trademark of Apple Inc., registered in the U.S. and other countries and regions.
Linux® is a registered trademark of Linus Torvalds.
Windows is a trademark of the Microsoft group of companies.

3.2 Development toolchains

- IAR Systems® - IAR Embedded Workbench®⁽¹⁾
- Keil® - MDK-ARM⁽¹⁾
- STMicroelectronics - STM32CubeIDE

1. On Windows® only.

3.3 Demonstration software

The demonstration software, included in the STM32Cube MCU Package corresponding to the on-board microcontroller, is preloaded in the STM32 flash memory for easy demonstration of the device peripherals in standalone mode. The latest versions of the demonstration source code and associated documentation can be downloaded from www.st.com.

3.4 EDA resources

All board design resources, including schematics, EDA databases, manufacturing files, and the bill of materials, are available from the [NUCLEO-G431RB](#), [NUCLEO-G474RE](#), and [NUCLEO-G491RE](#) product pages at www.st.com.

4 Conventions

Table 3 provides the conventions used for the ON and OFF settings in the present document.

Table 3. ON/OFF convention

Convention	Definition
Jumper JPx ON	Jumper fitted
Jumper JPx OFF	Jumper not fitted
Jumper JPx [1-2]	Jumper fitted between pin 1 and pin 2
Solder bridge SBx ON	SBx connections closed by 0 Ω resistor
Solder bridge SBx OFF	SBx connections left open
Resistor Rx ON	Resistor soldered
Resistor Rx OFF	Resistor not soldered
Capacitor Cx ON	Capacitor soldered
Capacitor Cx OFF	Capacitor not soldered

5 Safety recommendations

5.1 Targeted audience

This product targets users with at least basic electronics or embedded software development knowledge like engineers, technicians, or students.

This board is not a toy and is not suited for use by children.

5.2 Handling the board

This product contains a bare printed circuit board and like all products of this type, the user must be careful about the following points:

- The connection pins on the board might be sharp. Be careful when handling the board to avoid injury.
- This board contains static sensitive devices. To avoid damaging it, handle the board in an ESD-proof environment.
- While powered, do not touch the electric connections on the board with your fingers or anything conductive. The board operates at a voltage level that is not dangerous, but components might be damaged when shorted.
- Do not put any liquid on the board and avoid operating it close to water or at a high humidity level.
- Do not operate the board if it is dirty or dusty.
- The pins of the board are exposed and must not come into contact with a metal surface, as this can produce a short circuit and damage the board.

5.3 Delivery recommendations

Before the first use, inspect the board for any damage that may have occurred during shipment. Ensure that all socketed components are securely fixed in their sockets and that nothing is loose in the plastic bag.

5.4 Power supply

A power supply unit or auxiliary equipment complying with the EN 62368-1:2014+A11:2017 standard (or the one replacing it) and safety extralow voltage (SELV/ES1) with limited power capability (LPS/PS2) must power this equipment.

6 Quick start

The STM32G4 Nucleo-64 board is a low-cost and easy-to-use development kit, used to evaluate and start a development quickly with an STM32G4 series microcontroller in an LQFP64 package. Before installing and using the product, accept the Evaluation Product License Agreement from the www.st.com/epl webpage. For more information on the STM32G4 Nucleo-64 and for demonstration software, visit the www.st.com/stm32nucleo webpage.

6.1 Getting started

Follow the sequence below to configure the STM32G4 Nucleo-64 board and launch the demonstration application (refer to [Figure 4](#) for component location):

1. Check the jumper position on the board (refer to [Table 4](#))
2. For the correct identification of the device interfaces from the host PC and before connecting the board, install the Nucleo USB driver available on the www.st.com/stm32nucleo website
3. To power the board, connect the STM32G4 Nucleo-64 board to a PC with a USB cable (USB Type-A or USB Type-C® to Micro-B) through the USB connector CN1 of the board
4. Then, green LED LD3 (5V_PWR) and red LED LD1 (COM) light up, green LED LD2 (USER) blinks
5. Press user button B1 (left blue USER button)
6. Observe how the blinking of the green LED LD2 changes according to the clicks on button B1
7. The software demonstration and the several software examples that allow users to exercise Nucleo features, are available on the www.st.com/stm32nucleo webpage
8. Develop your own application using the available examples

Table 4. Jumper configuration


Jumper	Definition	Position ⁽¹⁾	Comment ⁽¹⁾
JP1	NRST	OFF	STLINK-V3E reset
JP3	T_RST	ON	-
JP5	5 V power-source selection	ON [1-2] (Default)	5V_USB_STLK (from ST-LINK)
		ON [3-4] (optional)	5V_VIN
		ON [5-6] (optional)	E5V
		ON [7-8] (optional)	5V_USB_CHGR
JP6	IDD	ON	-
JP7	BOOT0	OFF	-
JP8	VREF+ selection (VREF or VDD voltage supply selection)	ON [1-2] (Default)	VREF+ supplied with VREF
		ON [2-3] (optional)	VREF+ supplied with VDD

1. Default jumper state is shown in bold.

7 Hardware layout and configuration

The STM32G4 Nucleo-64 board is designed around the STM32 microcontrollers in a 64-pin LQFP package. Figure 3 shows the connections between the STM32 and its peripherals (STLINK-V3E, push-buttons, LEDs, USB, ARDUINO® Uno and ST morpho headers). Figure 4 and Figure 5 show the location of these features on the STM32G4 Nucleo-64 board. The mechanical dimensions of the board are shown in Figure 6.

Figure 3. Hardware block diagram

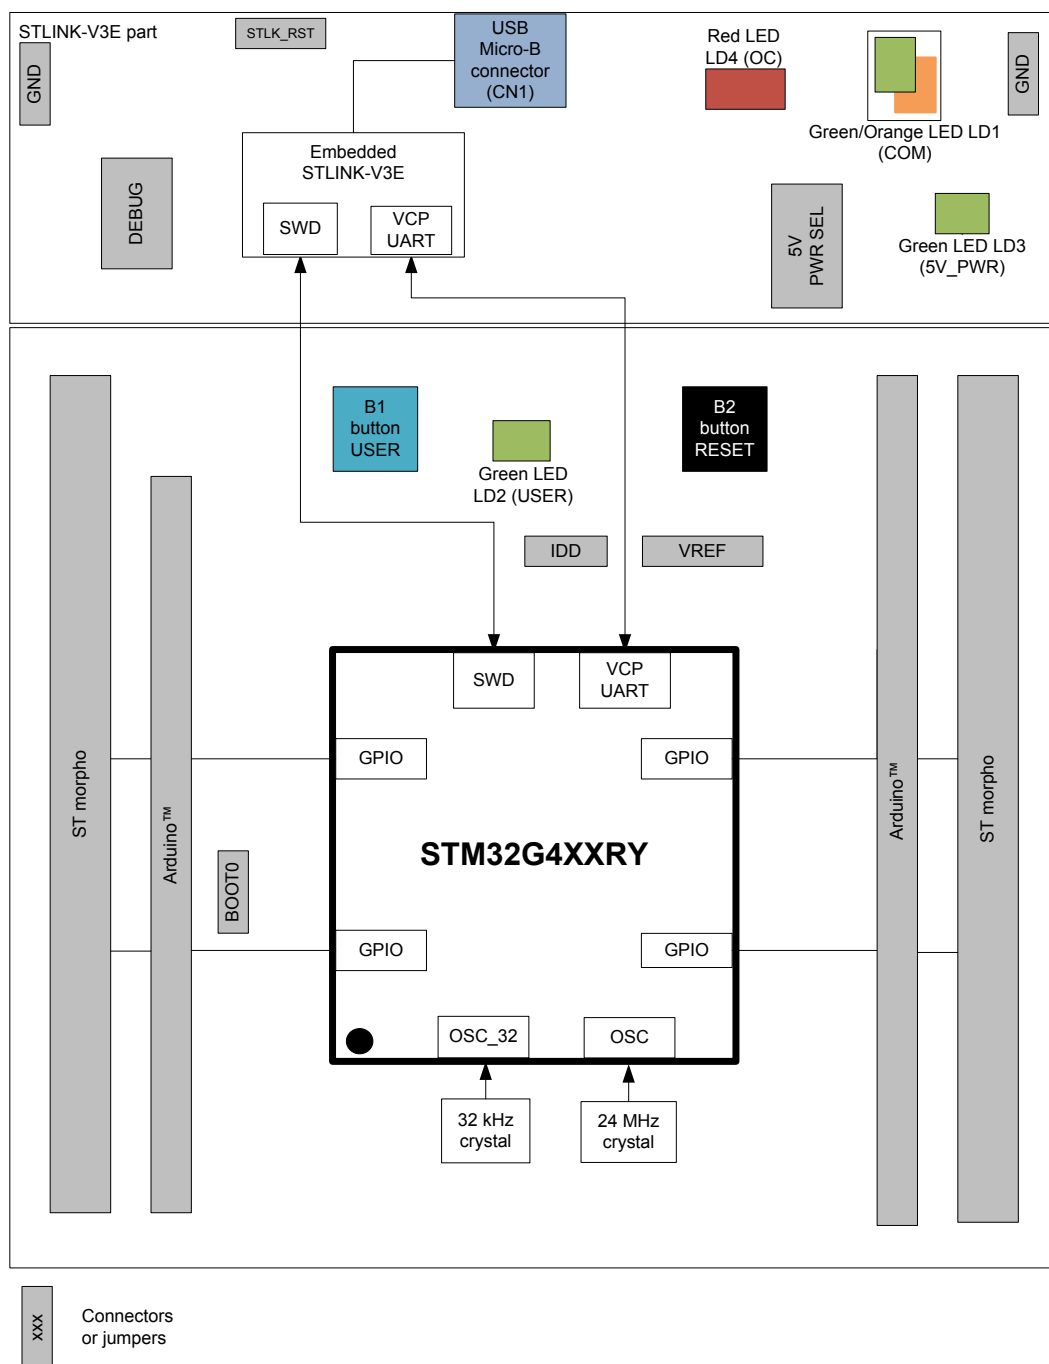

7.1 PCB layout

Figure 4. Top layout



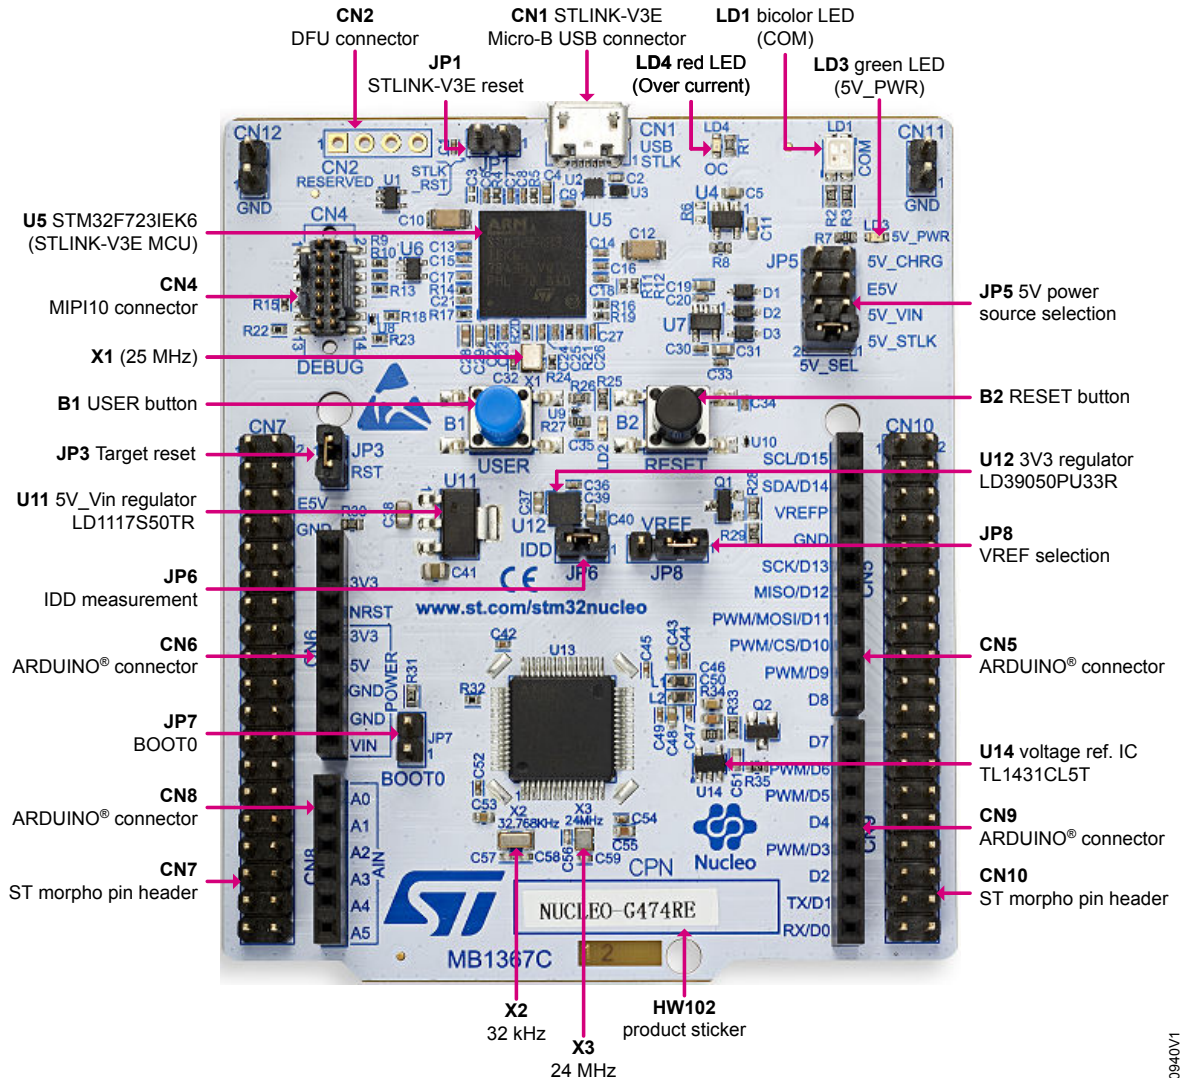


Figure 5. Bottom layout


DT60941V1

7.2 Mechanical drawing

Figure 6. STM32G4 Nucleo 64 board mechanical drawing (in millimeter)

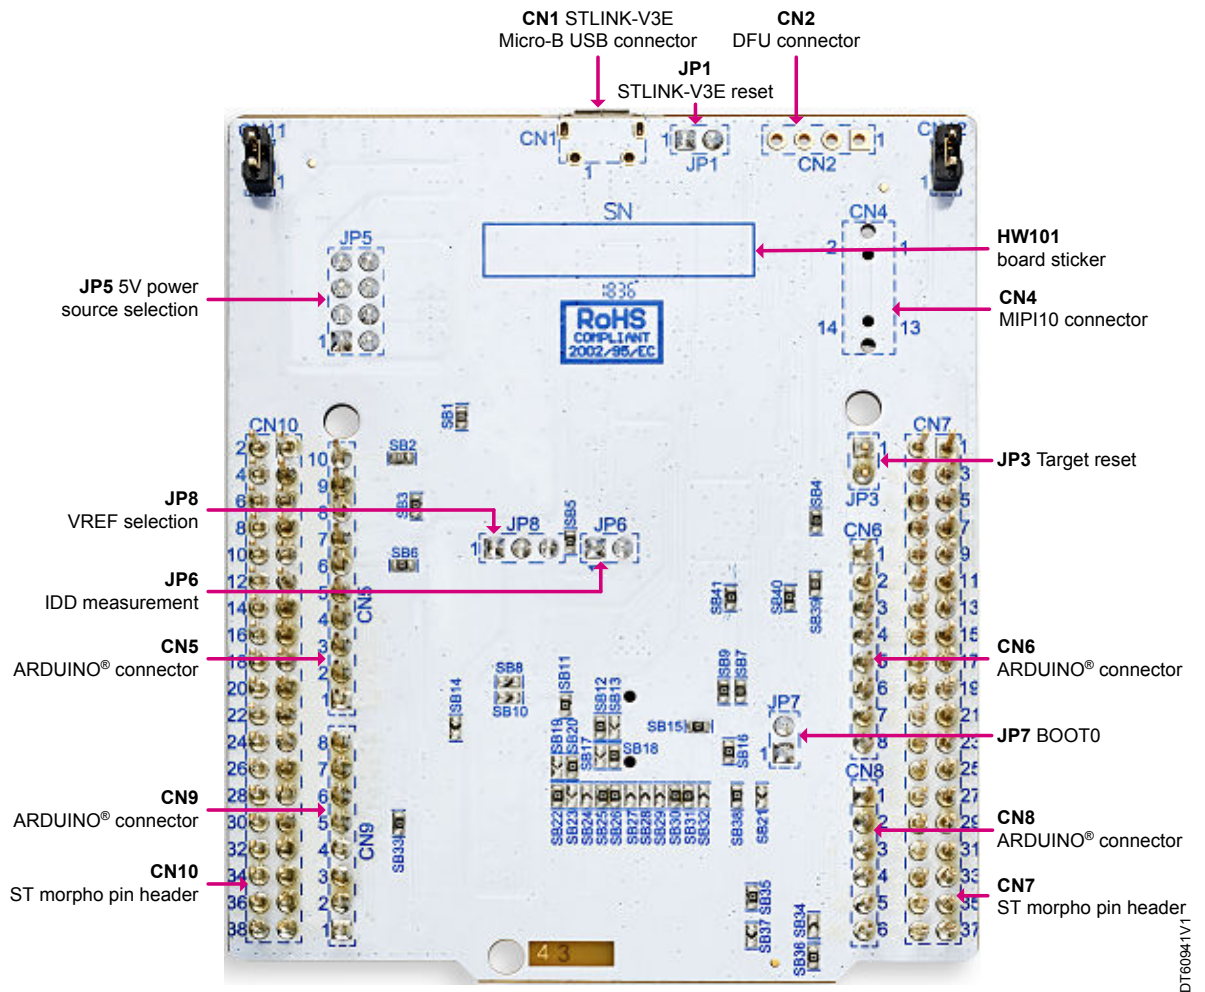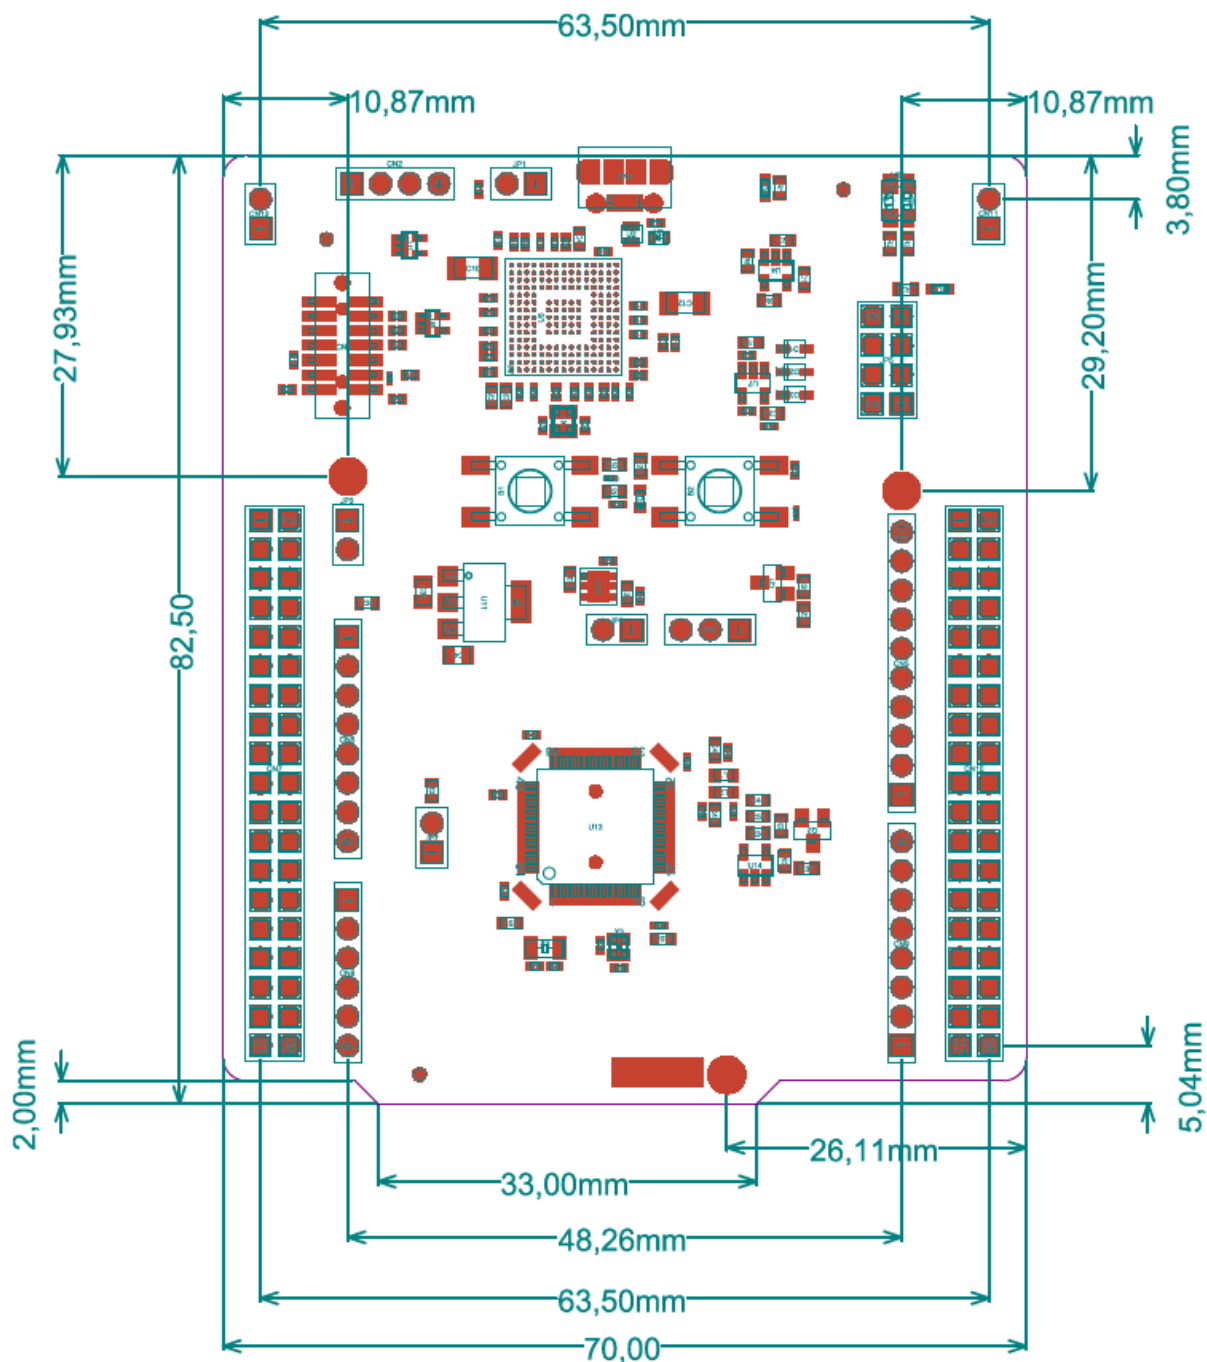

7.3 Embedded STLINK-V3E

There are two different ways to program and debug the onboard STM32 MCU:

- Using the embedded STLINK-V3E
- Using an external debug tool connected to the CN4 MIPI10 connector.

The STLINK-V3E programming and debugging tool is integrated in the STM32G4 Nucleo-64 board.

The embedded STLINK-V3E supports only SWD and VCP for STM32 devices. For information about debugging and programming features of STLINK-V3, refer to the *STLINK-V3SET debugger/programmer for STM8 and STM32* user manual (UM2448), which describes in details all the STLINK-V3 features.

Features supported on STLINK-V3E:

- 5V power supplied by USB connector (CN1)
- USB 2.0 high-speed-compatible interface
- JTAG/serial wire debugging (SWD) specific features:
 - 3 V to 3.6 V application voltage on the JTAG/SWD interface and 5 V tolerant inputs
 - JTAG
 - SWD and serial viewer (SWV) communication
- MIP110 connector (CN4)
- Status LED LD1 (COM) that blinks during communication with the PC
- Fault red LED LD4 (OC) alerting on USB overcurrent request
- 5 V / 300 mA output power supply capability (U4) with current limitation and LED
- 5 V power green LED LD3 (5V_PWR)


7.3.1 Drivers

Before connecting the STM32G4 Nucleo-64 board to a Windows® 7, Windows® 8, or Windows® 10 PC via USB, a driver for the STLINK-V3E must be installed (not required for Windows® 10). It is available at the www.st.com website.

If the STM32G4 Nucleo-64 board is connected to the PC before the driver is installed, some STM32G4 Nucleo-64 interfaces may be declared as “Unknown” in the PC device manager. In this case, the user must install the dedicated driver files, and update the driver of the connected device from the device manager as shown in Figure 7.

Note: Prefer using the USB Composite Device handle for a full recovery.

Figure 7. USB composite device

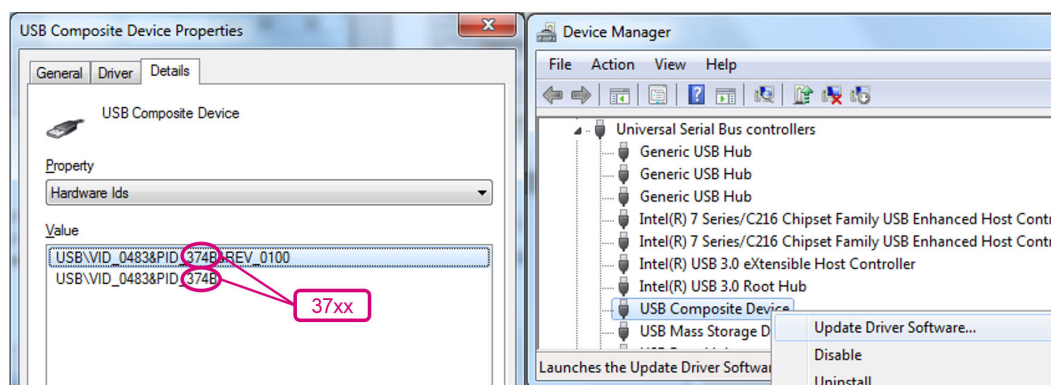

Note: 37xx:

- 374E for STLINK-V3E without bridge functions
- 374F for STLINK-V3E with bridge functions

7.3.2 STLINK-V3E firmware upgrade

The STLINK-V3E embeds a firmware upgrade mechanism for in-situ upgrade through the USB port. As the firmware may evolve during the lifetime of the STLINK-V3E product (for example new functionalities, bug fixes, support for new microcontroller families), it is recommended to visit the www.st.com website before starting to use the STM32G4 Nucleo-64 board and periodically, to stay up-to-date with the latest firmware version.

7.3.3

Using an external debug tool to program and debug the on-board STM32

There are two basic ways to support an external debug tool:

1. Keep the embedded STLINK-V3E running. Power on the STLINK-V3E at first until the COM LED turns red. Then connect the external debug tool through the CN4 STDC14/MIP10 debug connector
2. Set the embedded STLINK-V3E in high-impedance state: when jumper JP1 (STLK_RST) is ON, the embedded STLINK-V3E is in RESET state and all GPIOs are in high-impedance; then, connect the external debug tool to debug connector CN4.

Figure 8. Connecting an external debug tool to program the on-board STM32G4

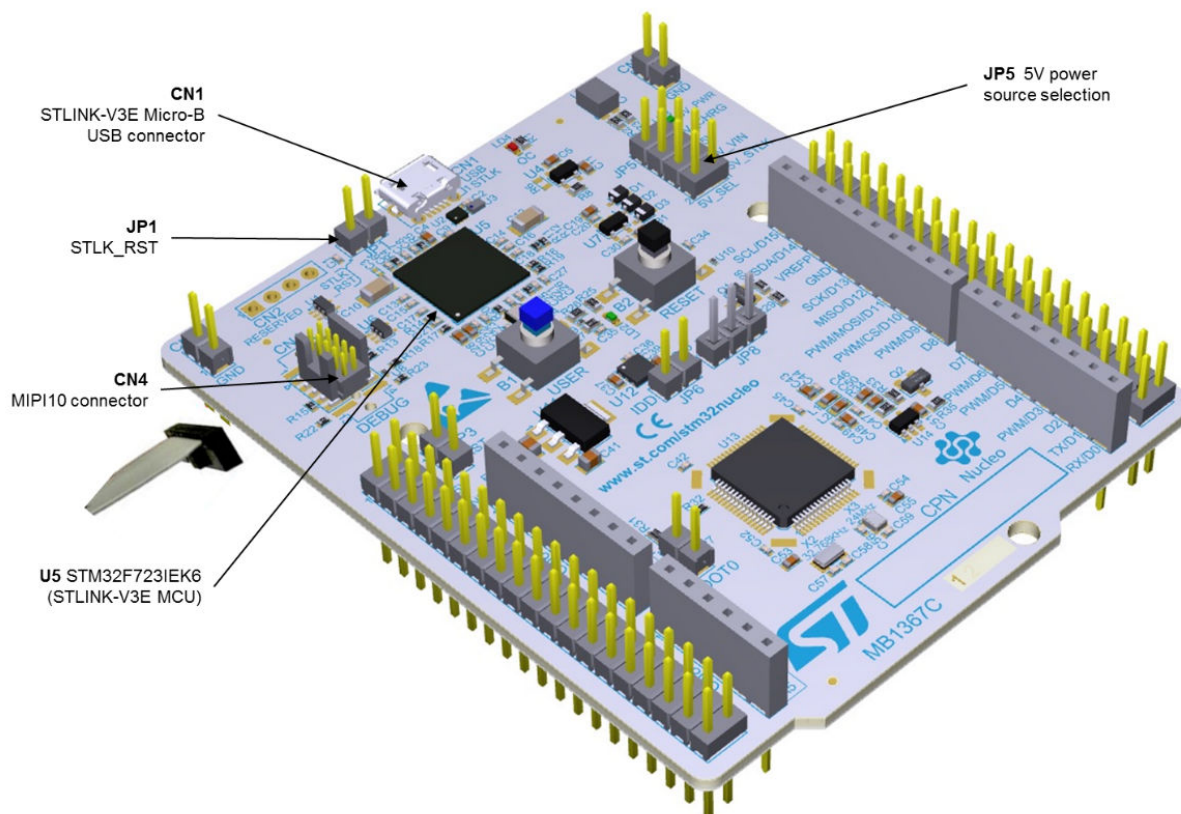


Table 5. MIP10/STDC14 debug connector (CN4)

MIP10 pin	STDC14 pin	CN4	Function
-	1	NC	Reserved
-	2	NC	Reserved
1	3	3V3	Target VCC
2	4	T_SWDIO	Target SWDIO using SWD protocol or Target JTMS (T_JTMS) using JTAG protocol
3	5	GND	Ground
4	6	T_SWCLK	Target SWCLK using SWD protocol or Target JCLK (T_JCLK) using JTAG protocol
5	7	GND	Ground
6	8	T_SWO	Target SWO using SWD protocol or Target JTDO (T_JTMS) using JTAG protocol
7	9	NC	Not connected

MIPI10 pin	STDC14 pin	CN4	Function
8	10	T_JTDI	Not used by SWD protocol, Target JTDI (T_JTDI) using JTAG protocol, only for external tools
9	11	GNDDetect	GND detect for plug indicator, used on SWD and JTAG neither
10	12	T_NRST	Target NRST using SWD protocol or Target JTMS (T_JTMS) using JTAG protocol
-	13	T_VCP_RX	Target RX used for VCP (must be UART dedicated to bootloader)
-	14	T_VCP_TX	Target TX used for VCP (must be UART dedicated to bootloader)


7.4

Power supply

The power supply can be provided by five different sources:

- A host PC connected to CN1 through a USB cable (default setting)
- An external 7 V - 12 V (VIN) power supply connected to CN7 pin 24
- An external 5 V (E5V) power supply connected to CN7 pin 6
- An external 5 V USB charger (5V_USB_CHGR) connected to CN1
- An external 3.3 V power supply (3V3) connected to CN7 pin 16

Figure 9. STM32G4 Nucleo-64 board power tree

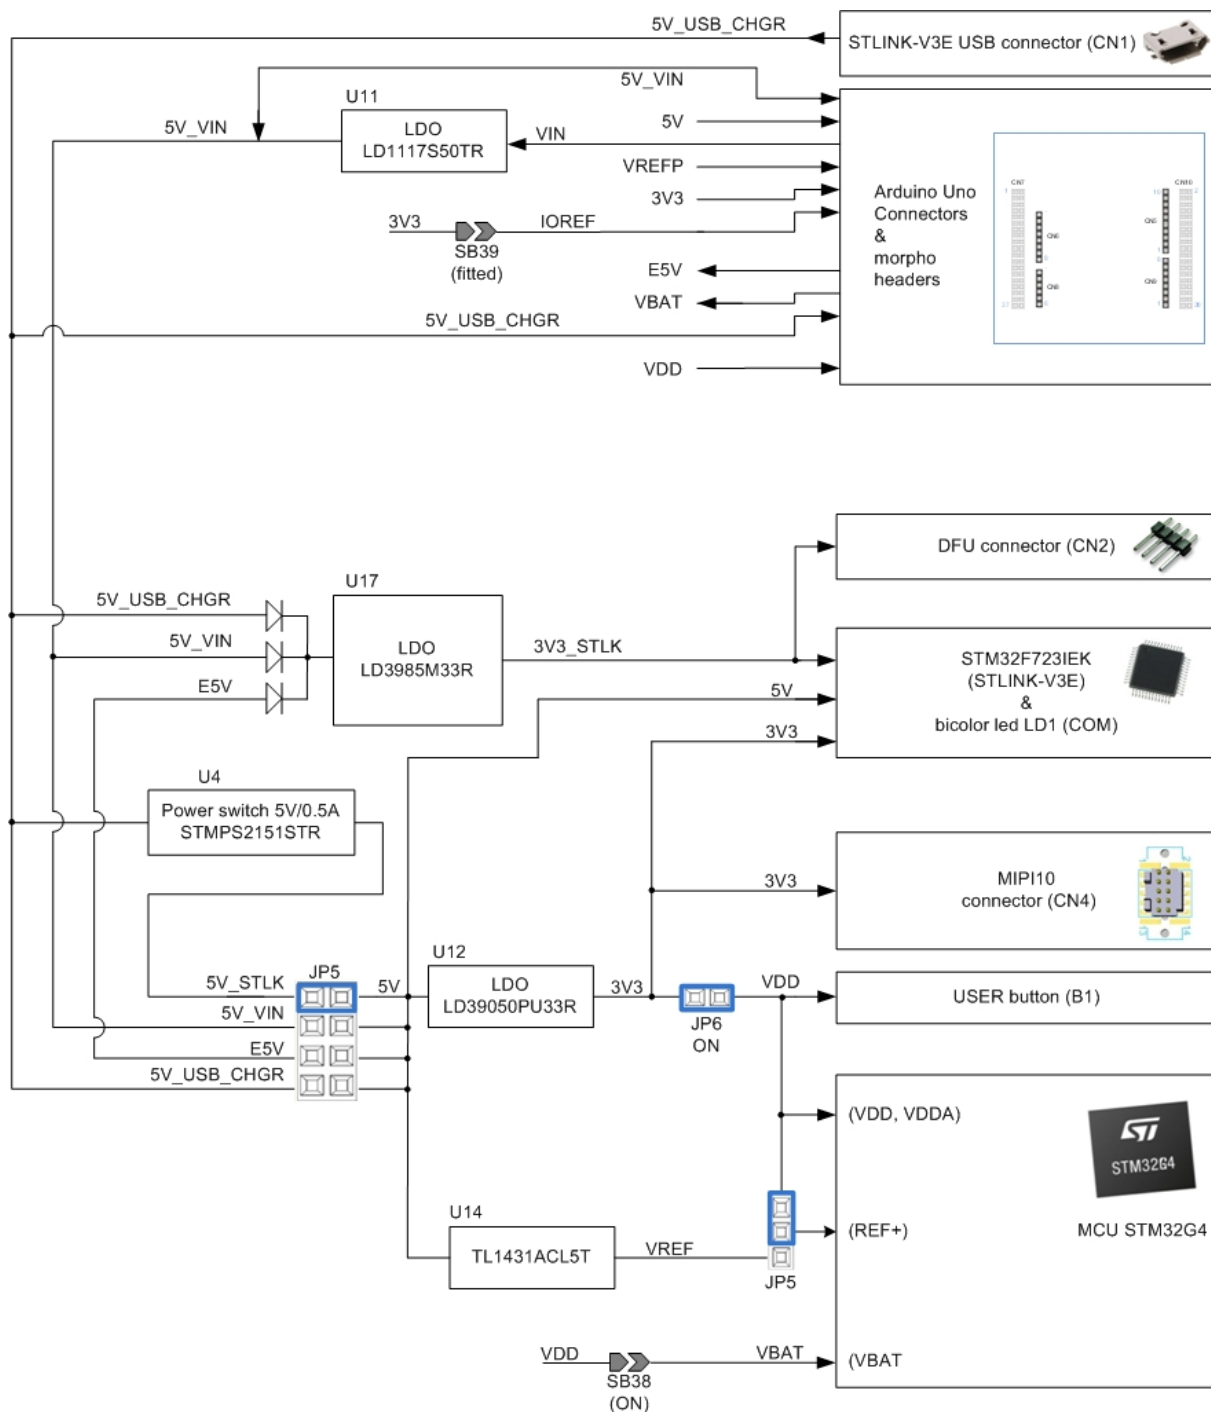


If 5V_VIN, E5V, 5V_USB_CHGR, or 3V3 is used to power the STM32G4 Nucleo-64 board, this power source must comply with the EN 62368-1:2014+A11:2017 standard, or the standard/amendment that has replaced it since if the norm was changed. It must be Safety Extra Low Voltage (SELV) with limited power capability. If the power supply is 3V3, the ST-LINK is not powered and cannot be used.

Power supply input from STLINK-V3E USB connector (default setting)

The STM32G4 Nucleo-64 board and shield can be powered from STLINK-V3E connector CN1 (5 V) by placing a jumper between pins 1-2 of JP5, “5V_SEL”, as illustrated in Figure 10. This is the default setting.

Figure 10. Power supply input from STLINK-V3E USB connector with PC (5 V, 500 mA max)

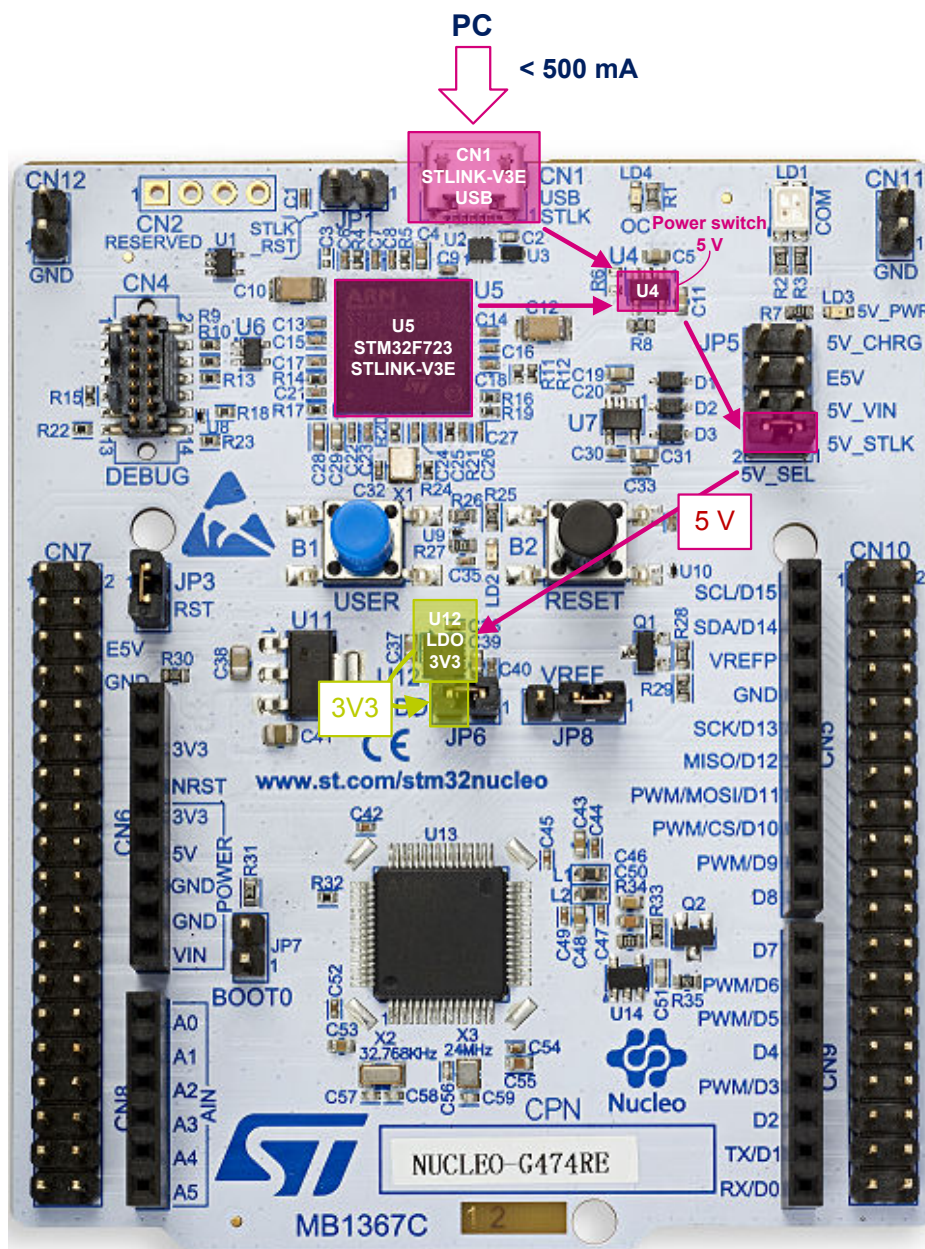

Legend:

5 V

3.3 V

If the USB enumeration succeeds, the 5V_USB_STLK power is enabled, by asserting the T_PWR_EN signal from STM32F723IEK6 “STLINK V3” (U5). This pin is connected to a power switch STMP2151STR (U4), which powers the board. The power switch STMP2151STR (U4) also features a current limitation to protect the PC in case of short-circuit on board. If an overcurrent (more than 500 mA) happens on board, the red LED LD4 is lit.

The Nucleo board and its shield can be powered from ST-LINK USB connector CN1, but only ST-LINK circuit gets power before USB enumeration, because the host PC only provides 100 mA to the board at that time.

During the USB enumeration, the Nucleo board requires 500 mA power from the host PC:

- If the host is able to provide the required power, the enumeration finishes by a “SetConfiguration” command and then, the power switch STMP2151STR is switched ON, the green LED LD3 (5V_PWR) is turned ON, thus the Nucleo board and its shield on it can consume 500 mA at the maximum.
- If the host is not able to provide the requested current, the enumeration fails. Therefore, the STMP2151STR power switch (U4) remains OFF and the MCU part including the extension board is not powered. As a consequence, the green LED LD5 remains turned OFF. In this case, it is mandatory to use an external power supply.

Caution: *If the maximum current consumption of the STM32G4 Nucleo-64 board and its shield boards exceeds 300 mA, it is mandatory to power the STM32G4 Nucleo-64 board with an external power supply connected to E5V, VIN, or 3.3 V.*

External power supply input from VIN (7 V - 12 V, 800 mA max)


When the STM32G4 Nucleo-64 board is power-supplied by VIN (refer to Table 6 and Figure 11), the jumper configuration must be the following: jumper JP2 on pins 3-4 “5V_VIN”.

The STM32G4 Nucleo-64 board and its shield boards can be powered in three different ways from an external power supply, depending on the voltage used. The three cases are summarized in Table 6.

Table 6. External power sources: VIN (7 V - 12 V)

Input power name	Connector pins	Voltage range	Maximum current	Limitation
VIN	CN6 pin 8 CN7 pin 24	7 V to 12 V	800 mA	From 7 V to 12 V only and input current capability is linked to input voltage: • 800 mA input current when VIN = 7 V • 450 mA input current when 7 V < VIN < 9 V • 250 mA input current when 9 V < VIN < 12 V

Figure 11. Power supply input from VIN (7 V - 12 V, 800 mA max)

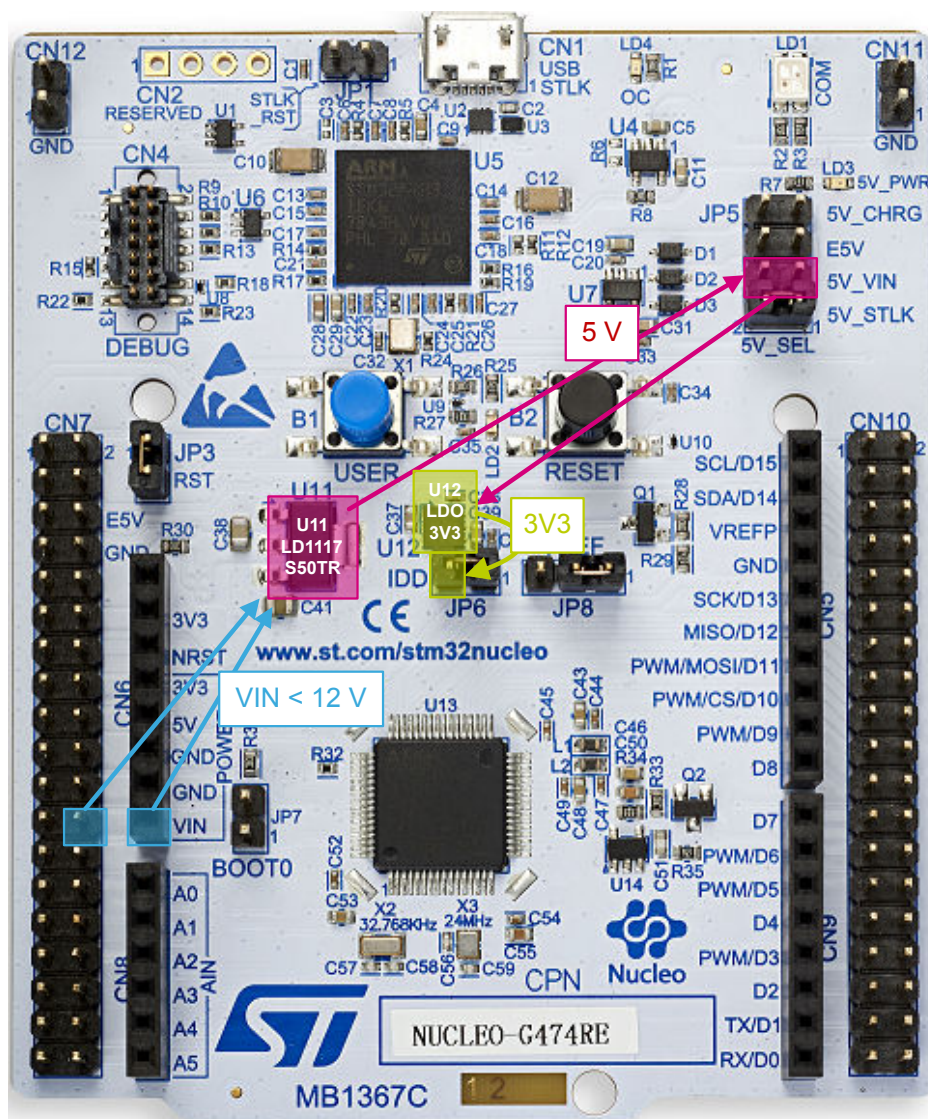

Legend: VIN < 12 V 5 V 3.3 V

Refer to Section 7.4.1 for debugging when using an external power supply.


External power supply input from E5V (5 V, 500 mA max)

When the STM32G4 Nucleo-64 board is power-supplied by E5V (refer to Table 7 and Figure 12), the jumper configuration must be the following: jumper JP5 on pins 5-6 "E5V".

Table 7. External power sources: E5V (5 V)

Input power name	Connector pins	Voltage range	Maximum current
E5V	CN7 pin 6	4.75 V to 5.25 V	500 mA

Figure 12. Power supply input from 5V_EXT (5 V, 500 mA max)

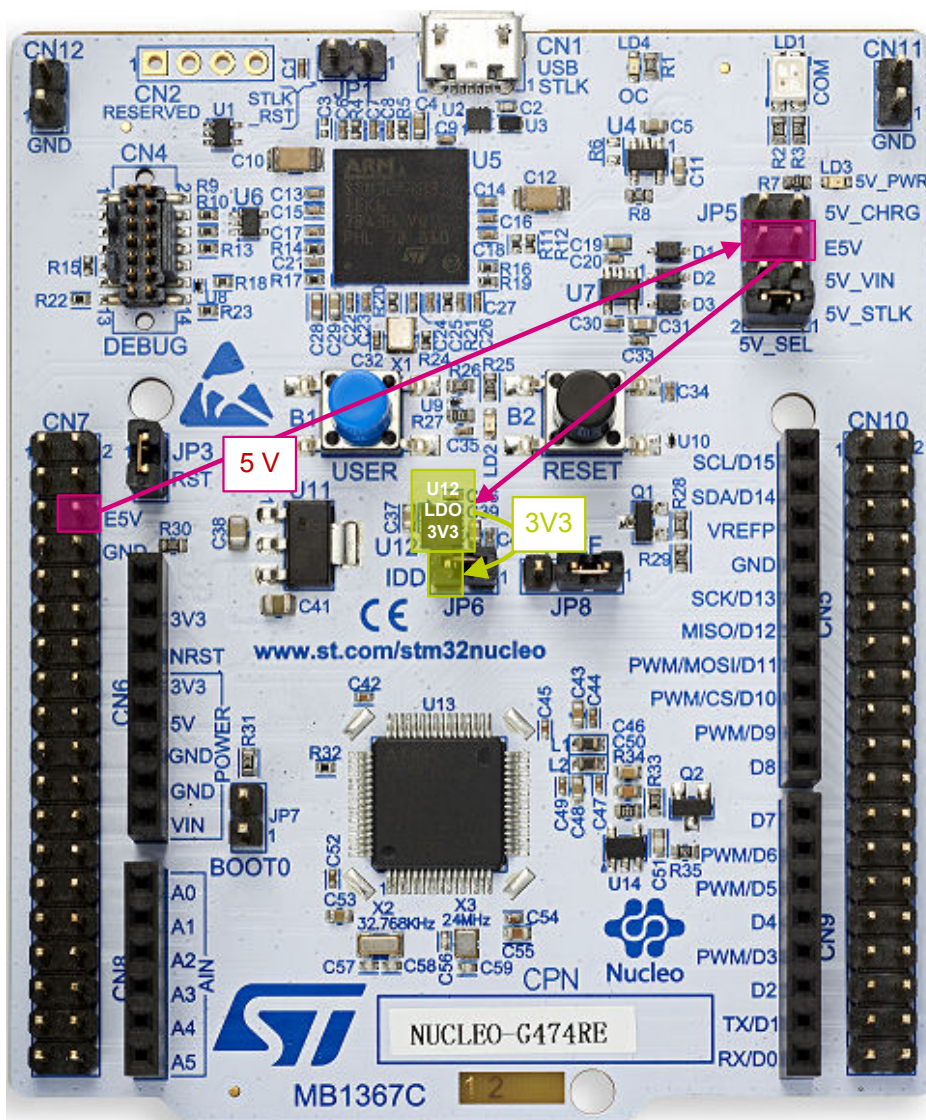

Legend: 5 V 3.3 V

Refer to Section 7.4.1 for debugging when using an external power supply.


External power supply input from USB charger (5 V)

When the STM32G4 Nucleo-64 board is power-supplied by a USB charger on CN1 (refer to Table 8 and Figure 13), the jumper configuration must be the following: jumper JP2 on pins 7-8 "5V_CHGR".

Table 8. External power sources: 5V_CHGR (5 V)

Input power name	Connector pins	Voltage range	Maximum current
5V_CHGR	CN1	5 V	-

Figure 13. Power supply input from ST-LINK USB connector with USB charger (5 V)

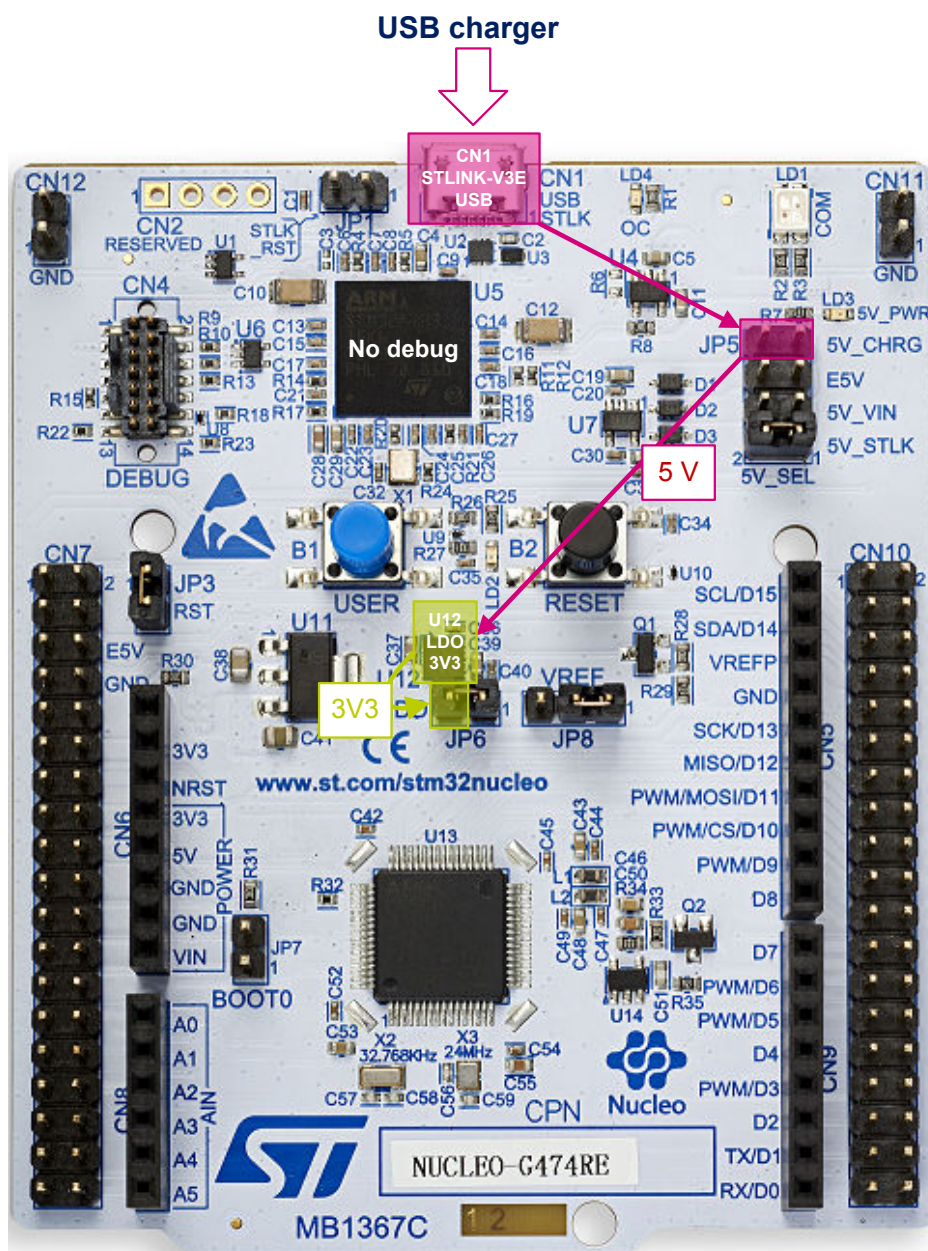

Legend:

5 V

3.3 V


External power supply input from external 3.3 V

When the 3.3 V is provided by a shield board, it is interesting to use the 3.3 V (CN6 pin 4 or CN7 pin 16) directly as power input (refer to Table 9 and Figure 14). In this case, the programming and debugging features are not available, since the ST-LINK is not powered.

Table 9. External power sources: 3V3

Input power name	Connector pins	Voltage range	Maximum current
3V3	CN6 pin 4 CN7 pin 16	3 V to 3.6 V	1.3 A

Figure 14. Power supply input from external 3V3

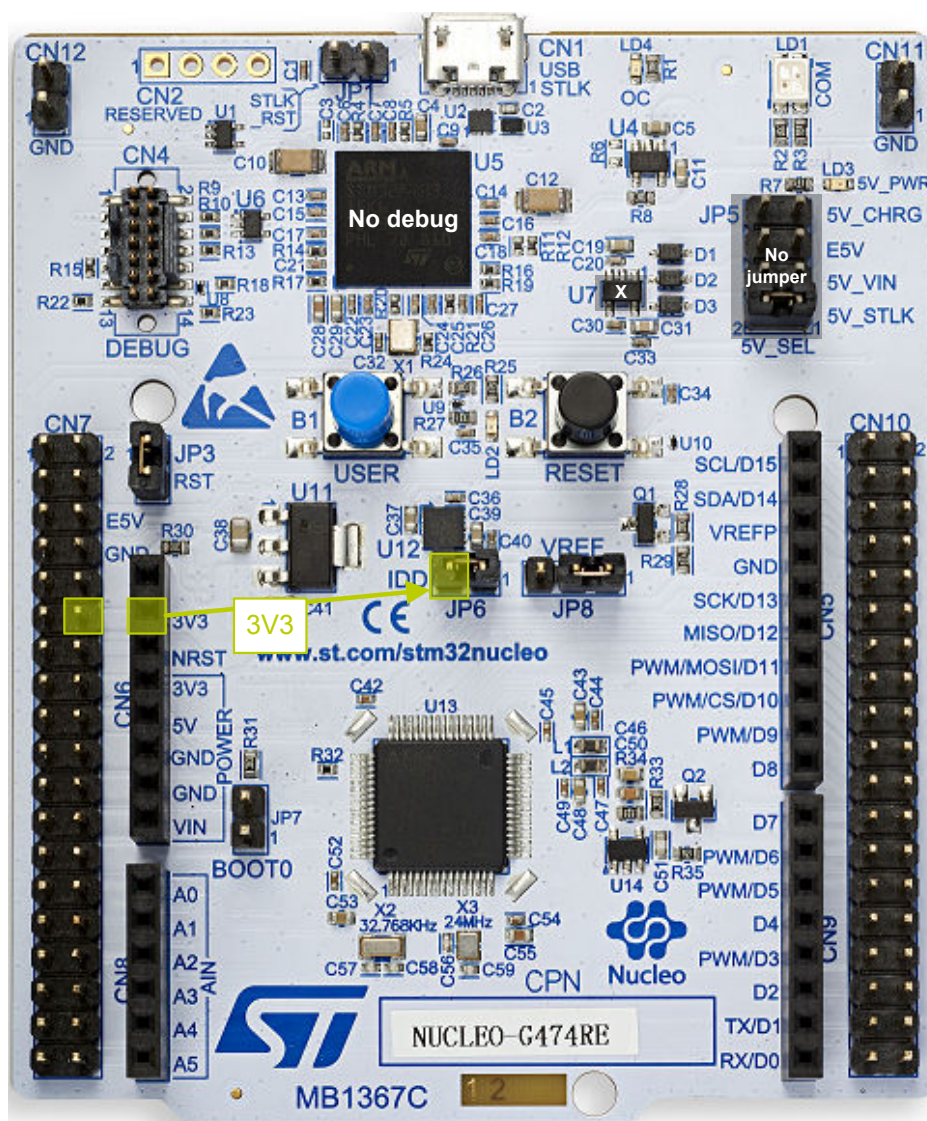

Legend:

3.3 V

7.4.1 Debugging while using VIN or EXT as an external power supply

When powered by VIN or E5V, it is still possible to use the ST-LINK for programming or debugging only, but it is mandatory to power the board first using VIN or EXT, then to connect the USB cable to the PC. In this way the enumeration succeeds, thanks to the external power source.

The following power-sequence procedure must be respected:

1. Connect jumper JP5 between pins 5 & 6 for E5V or between pins 3 & 4 for VIN
2. Connect the external power source to VIN or E5V
3. Power on the external power supply $7V < VIN < 12V$ for VIN, or 5V for E5V
4. Check that the green LED LD3 is turned ON
5. Connect the PC to the USB connector CN1

If this order is not respected, the board may be powered by USB first, then by VIN or E5V as the following risks may be encountered:

1. If more than 300 mA current is needed by the board, the PC may be damaged or the current supplied can be limited by the PC. As a consequence, the board is not powered correctly.
2. 300 mA is requested at enumeration so there is risk that the request is rejected and the enumeration does not succeed if the PC cannot provide such current. Consequently, the board is not power supplied (LED LD3 remains OFF).

7.5 Clock sources

7.5.1 HSE clock (high-speed external clock)

There are four ways to configure the pins corresponding to the high-speed external clock (HSE):

- **MCO from ST-LINK:** MCO output of ST-LINK is used as input clock. This frequency cannot be changed, it is fixed at 8 MHz and connected to the PF0-OSC_IN of the STM32 microcontroller. The configuration must be:
 - SB27 ON
 - SB25 and SB26 OFF
 - SB24 and SB28 OFF
- **HSE on-board oscillator from X3 crystal (default):** For typical frequencies and its capacitors and resistors, refer to the STM32 microcontroller datasheet and to the *Guidelines for oscillator design on STM8AF/AL/S and STM32 MCUs/MPUs* application note ([AN2867](#)) for the oscillator design guide. The X3 crystal has the following characteristics: 24 MHz, 6 pF load capacitance, 20 ppm. It is recommended to use NX2016SA-24MHz-EXS00A-CS10820 manufactured by NDK. The configuration must be:
 - SB25 and SB26 ON
 - SB24 and SB28 OFF
 - SB27 OFF
 - C56 and C59 ON with 6.8 pF capacitors
- **Oscillator from external PF0:** from an external oscillator through the pin 29 of the CN7 connector. The configuration must be:
 - SB28 ON
 - SB24 OFF
 - SB25 and SB26 OFF
 - SB27 OFF
- **HSE not used:** PF0 and PF1 are used as GPIOs instead of as clock. The configuration must be:
 - SB24 and SB28 ON
 - SB27 OFF
 - SB25 and SB26 OFF

7.5.2 LSE clock (low-speed external clock) – 32.768 kHz

There are three ways to configure the pins corresponding to the low-speed clock (LSE):

- **On-board oscillator (default):** X2 crystal. Refer to the *Oscillator design guide for STM8S, STM8A and STM32 microcontrollers* application note (AN2867). It is recommended to use NX3215SA-32.768kHz-EXS00A-MU00525 (32.768 kHz, 6 pF load capacitance, 20 ppm) from NDK.
 - SB30 and SB31 ON
 - SB29 and SB32 OFF
- **Oscillator from external PC14:** from external oscillator through the pin 25 of CN7 connector. The configuration must be:
 - SB29 and SB32 ON
 - SB30 and SB31 OFF
- **LSE not used:** PC14 and PC15 are used as GPIOs instead of low-speed clock. The configuration must be:
 - SB29 and SB32 ON
 - SB30 and SB31 OFF

7.6 Board functions

7.6.1 LEDs

LD1 STLINK-V3E COM LED

The bicolor LED LD1 (green, red) provides information about STLINK-V3E communication status. LD1 default color is red. LD1 turns to green to indicate that communication is in progress between the PC and the STLINK-V3E, with the following setup:

- Blinking red: the first USB enumeration with the PC is taking place
- Red on: when the initialization between the PC and STLINK-V3E is complete
- Blinking red/green: during communication with target
- Green on: communication finished and successful
- Orange on: communication failure

LD2 USER

This green LED is a user LED connected to STM32G4 I/O PA5 (SB6 ON) corresponding to the ARDUINO® D13. To light LED LD2, a high logic state “1” must be written in the corresponding GPIO PA5. A transistor is used to drive the LED LD2. LD2 consumption does not impact the VDD STM32G4 power measurement, since LD2 is isolated from it.

LD3 PWR

The green LED indicates that the STM32G4 part is powered and +5 V power is available on CN6 pin 5 and CN7 pin 18.

LD4 USB power fault (OC, overcurrent)

LD4 indicates that the board power consumption on USB ST-LINK exceeds 500 mA. Consequently, the user must power the board using an external power supply.

7.6.2 Push-buttons

B1 USER (blue button)

The user button is connected to the STM32G4 I/O PC13 by default (Tamper support, SB16 ON and SB21 OFF) or PA0 (Wakeup support, SB21 ON and SB16 OFF) of the STM32G4 microcontroller.

B2 RESET (black button)

This push-button is connected to NRST (PG10-NRST) and is used to RESET the STM32G4 microcontroller.

7.6.3 MCU voltage selection on VREF+

The STM32G4 Nucleo-64 board offers the possibility to supply the STM32G4 microcontroller with either VREF or VDD on its VREF+ input voltage pin.

VREF+ is targeted to offer high-end analog device, especially for precise analog applications (ADC converters usage) with the STM32G4 microcontroller.

In the STM32G4 Nucleo-64 board, the VREF+ can be supplied with a very stable output voltage provided by the TL1431CL5T. The TL1431CL5T is an adjustable shunt voltage reference with guaranteed temperature stability over the entire operating temperature range. The output voltage may be set to any value between 2.5 V and up to 36 V with two external resistors. The TL1431CL5T operates with a wide current range from 1 mA to 100 mA with a typical dynamic impedance of 0.2 Ω .

JP8 jumper is used to select either the VREF or VDD voltage for VREF+.

- Place the JP8 jumper on [1-2] to supply the MCU VREF+ with VREF
 - To have VREF at 2.5 V, then SB14 is fitted and R34 is not fitted
 - To have VREF at 3.25 V, then SB14 is not fitted. $VREF = 2,5 \times (1 + (R33 / R34)) = 2,5 \times (1 + (10k / 33k))$.
- Place the JP8 jumper on [2-3] to supply the MCU VREF+ with VDD

7.6.4 Current consumption measurement (IDD)

Jumper JP6, labeled IDD, is used to measure the STM32G4 microcontroller consumption by removing the jumper and by connecting an ammeter:

- JP6 ON: STM32 is powered with 3V3 voltage (default)
- JP6 OFF: an ammeter must be connected to measure the STM32G4 current. If there is no ammeter, the STM32 is not powered.

To get a correct and complete current consumption of the STM32G4, jumper JP8 must be set to [2-3] to supply the MCU VREF+ with VDD, otherwise, the current consumption at pin VREF+ is not taken into account in the IDD (through jumper JP6).

7.6.5 Virtual COM port (VCP): LPUART and USART

The STM32G4 Nucleo-64 board offers the possibility to connect an LPUART or a USART interface to the STLINK-V3E, ARDUINO® Uno V3 connector (CN9 pins 2 and 1), or ST morpho connector (CN10 pins 35 and 37). The selection is done by setting the related solder bridges as detailed in Table 10 and Table 11.

Table 10. USART1 connection

Solder bridge configuration ⁽¹⁾	Feature ⁽¹⁾
SB13, SB19: ON SB12, SB20, SB18, SB22: OFF	USART1 (PC4/PC5) connected to ARDUINO® (D1 & D0) and ST morpho connector (CN10 pin 35 & 37).
SB12, SB20: ON SB13, SB19, SB17, SB23: OFF	USART1 (PC4/PC5) connected to STLINK-V3E Virtual COM port.

1. The default configuration is shown in bold

Table 11. LPUART1 connection

Solder bridge configuration ⁽¹⁾	Feature ⁽¹⁾
SB17, SB23: ON SB18, SB22, SB12, SB20: OFF	LPUART1 (PA2/PA3) connected to STLINK-V3E Virtual COM port.
SB18, SB22: ON SB17, SB23, SB13, SB19: OFF	LPUART1 (PA2/PA3) connected to ARDUINO® (D1 & D0) and ST morpho connector (CN10 pin 35 & 37).

1. The default configuration is shown in bold

By default:

- Communication between the target STM32G4 and the STLINK-V3E MCU is enabled on LPUART1 to support the Virtual COM port
- Communication between the target STM32G4 and ARDUINO® (and ST morpho) connectors is enabled on USART1

7.7 Solder bridges

All 41 solder bridges are located on the bottom layer of the STM32G4 Nucleo-64 board.

Table 12. Solder bridge configuration

Solder bridge control	Solder bridge (SB)	State ⁽¹⁾	Description ⁽¹⁾
100 nF on PG10-NRST	SB1	ON	100 nF capacitor grounded to PG10-NRST of the STM32G4
		OFF	100 nF capacitor disconnected from PG10-NRST of the STM32G4
PB8 on ARD_D14	SB2	ON	PB8 connected to ARDUINO® D14
		OFF	PB8 not connected to ARDUINO® D14
PC5 on ST morpho	SB3	ON	PC5 connected to ST morpho CN10 pin 6
		OFF	PC5 not connected to ST morpho CN10 pin 6
PB8 on Morpho	SB4	ON	PB8 connected to ST morpho CN7 pin 7
		OFF	PB8 not connected to ST morpho CN7 pin 7
3.3 V LDO output	SB5	ON	U12 LDO output provides 3.3 V
		OFF	U12 LDO output does NOT provide 3.3 V, user must connect an external 3.3 V source.
User LED LD2	SB6	ON	User LED driven by PA5 (ARD_D13)
		OFF	User LED not driven
PA15 on Morpho	SB7	ON	PA15 connected to ST morpho CN7 pin 17
		OFF	PA15 not connected to ST morpho CN7 pin 17
SMD ferrite bead L1	SB8	ON	SMD ferrite bead L1 shunted. VDDA connected on VDD voltage supply
		OFF	SMD ferrite bead L1 on STM32G4 VDDA voltage supply
JTDI on MIPI10	SB9	ON	JTDI connected to MIPI10 connector (CN4 pin 10)
		OFF	JTDI not connected to MIPI10 connector (CN4 pin 10)
SMD ferrite bead L2	SB10	ON	SMD ferrite bead L2 shunted. VREF+ connected to either VREF or VDD depending on the jumper position on JP8
		OFF	SMD ferrite bead L2 on VREF+ (either VREF or VDD voltage supply (depending on the jumper position on JP8)).
AGND	SB11	ON	AGND connected to GND. Reserved, do not modify.
		OFF	AGND not connected to GND.
PC4 USART1 TX	SB12	ON	STLINK_TX (T_VCP_TX) connected to USART1 TX PC4
		OFF	STLINK_TX (T_VCP_TX) not connected to USART1 TX PC4
	SB13	ON	ARD_D1_TX connected to USART1 TX PC4
		OFF	ARD_D1_TX not connected to USART1 TX PC4

Solder bridge control	Solder bridge (SB)	State ⁽¹⁾	Description ⁽¹⁾
VREF voltage (3.25 V or 2.5 V)	SB14	ON	R33 = 10 kΩ is shunted. Then VREF = 2.5 V. Do not forget to remove in that case R34 = 33 kΩ.
		OFF	R33 = 10 kΩ is not shunted. Then VREF = 3.25 V. In that case, R34 = 33 kΩ must be fitted.
T_SWO on PB3	SB15	ON	T_SWO connected to PB3.
		OFF	T_SWO not connected to PB3 and isolated from ARD_D3.
PA2 LPUART1 TX	SB17	ON	STLINK_TX (T_VCP_TX) connected to LPUART1 TX PA2.
		OFF	STLINK_TX (T_VCP_TX) not connected to LPUART1 TX PA2.
	SB18	ON	ARD_D1_TX connected to LPUART1 TX PA2.
		OFF	ARD_D1_TX not connected to LPUART1 TX PA2.
PA3 LPUART1 RX	SB23	ON	STLINK_RX (T_VCP_RX) connected to LPUART1 RX PA3.
		OFF	STLINK_RX (T_VCP_RX) not connected to LPUART1 RX PA3.
	SB22	ON	ARD_D0_RX connected to LPUART1 RX PA3.
		OFF	ARD_D0_RX not connected to LPUART1 RX PA3.
PC5 USART1 RX	SB20	ON	STLINK_RX (T_VCP_RX) connected to USART1 RX PC5.
		OFF	STLINK_RX (T_VCP_RX) not connected to USART1 RX PC5.
	SB19	ON	ARD_D0_RX connected to USART1 RX PC5.
		OFF	ARD_D0_RX not connected to USART1 RX PC5.
USER button	SB16	ON	USER button connected to PC13.
		OFF	USER button not connected to PC13.
	SB21	ON	USER button connected to PA0.
		OFF	USER button not connected to PA0.
HSE CLK selection	SB25 & SB26	ON	HSE provided by external HSE 24 MHz CLK X3.
		OFF	HSE not provided by external HSE 24 MHz CLK X3.
	SB24	ON	PF1-OSC_IN connected to ST morpho connector I/O usage (CN7 pin 31).
		OFF	PF1-OSC_IN not connected to ST morpho connector.
	SB28	ON	PF0-OSC_OUT connected to ST morpho connector I/O usage (CN7 pin 29).
		OFF	PF0-OSC_OUT not connected to ST morpho connector.
	SB27	ON	ST-LINK MCO used for HSE CLK.
		OFF	ST-LINK MCO not used for HSE CLK.
PC4 on ST morpho	SB33	ON	PC4 connected to Morpho CN10 pin 34.
		OFF	PC4 not connected to Morpho CN10 pin 34.
VBAT	SB38	ON	VBAT (pin1 of STM32G4) powered by VDD.
		OFF	VBAT (pin1 of STM32G4) supplied separately (through morpho connector CN7 pin 33).
LSE CLK selection	SB31 & SB30	ON	LSE provided by external LSE 32.768 kHz CLK X2.
		OFF	LSE not provided by external LSE 32.768 kHz CLK X2.

Solder bridge control	Solder bridge (SB)	State ⁽¹⁾	Description ⁽¹⁾
LSE CLK selection	SB32	ON	PC14-OSC32_IN connected to ST morpho connector I/O usage (CN7 pin 25).
		OFF	PC14-OSC32_IN not connected to ST morpho connector.
	SB29	ON	PC15-OSC32_OUT connected to ST morpho connector I/O usage (CN7 pin 27).
		OFF	PC15-OSC32_OUT not connected to ST morpho connector.
PB9 on ARD_A4	SB34	ON	PB9 connected to ARD_A4 and connected to CN7 pin 36.
		OFF	PB9 not connected to ARD_A4 and connected to CN7 pin 36.
PC1 on ARD_A4	SB35	ON	PC1 connected to ARD_A4 and connected to CN7 pin 36.
		OFF	PC1 not connected to ARD_A4 and connected to CN7 pin 36.
PC0 on ARD_A5	SB36	ON	PC0 connected to ARD_A5 and connected to CN7 pin 38.
		OFF	PC0 not connected to ARD_A5 and connected to CN7 pin 38.
PA15 on ARD_A5	SB37	ON	PA15 connected to ARD_A5 and connected to CN7 pin 38.
		OFF	PA15 not connected to ARD_A5 and not connected to CN7 pin 38.
IOREF and 3V3 connection	SB39	ON	IOREF connected to 3V3 power supply.
		OFF	IOREF not connected to 3V3 power supply.
T_SWDIO on PA13	SB40	ON	T_SWDIO connected to PA13.
		OFF	T_SWO not connected to PA13.
T_SWCLK on PA14	SB41	ON	T_SWCLK connected to PA14.
		OFF	T_SWCLK not connected to PA14.

1. The default SB state is in bold.

All the other solder bridges present on the STM32G4 Nucleo-64 board are used to configure several I/Os and power-supply pins for compatibility of features and pinout with the target STM32G4 supported.

8 Board connectors

Several connectors are implemented on the STM32G4 Nucleo-64 board.

8.1 STLINK-V3E USB Micro-B connector CN1

The USB connector CN1 is used to connect the embedded STLINK-V3E to the PC for the programming and debugging purposes.

Figure 15. USB Micro-B connector CN1 (front view)


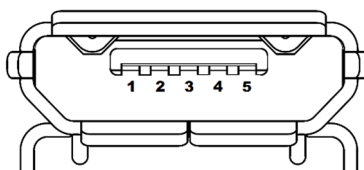


Table 13. USB Micro-B connector CN1 pinout

Connector	Pin number	Pin name	Signal name	STLINK-V3E MCU pin	Function
CN1	1	VBUS	5V_USB_CHGR	-	5 V power
	2	DM	USB_DEV_HS_CN_N	R14	USB diff pair N
	3	DP	USB_DEV_HS_CN_P	R15	USB diff pair P
	4	ID	-	-	-
	5	GND	-	-	GND

8.2 MIPI10 connector CN4

Figure 16. MIPI10 connector CN4

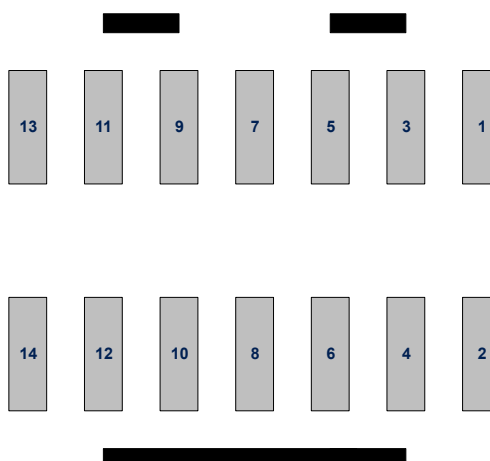

The MIPI10 connector is implemented with a footprint compatible with the STDC14 footprint. The related pinout for the MIPI10 connector is listed in [Table 14](#).

Table 14. MIPI10 connector CN4 pinout (STDC14 pinout compatible)


Connector	Pin number	Description	Pin number	Description
CN4	1	-	2	-
	3	VDD (3V3)	4	T_SWIDIO (PA13)
	5	GND	6	T_SWCLK (PA14)
	7	KEY (connected to GND)	8	T_SWO (PB3)
	9	-	10	T_JTDI (PA15)
	11	GNDDetect (connected to GND through a 100 Ω resistor)	12	T_NRST
	13	T_VCP_RX (PA3 by default or PC5)	14	T_VCP_TX (PA2 by default or PC4)

8.3


ARDUINO® Uno V3 connectors CN5, CN6, CN8 and CN9

The ARDUINO® connectors CN5, CN6, CN8 and CN9 are female connectors compatible with the ARDUINO® standard. Most shields designed for ARDUINO® can fit with the STM32G4 Nucleo-64 board.

The ARDUINO® connectors on the STM32G4 Nucleo-64 board support the ARDUINO® Uno V3.

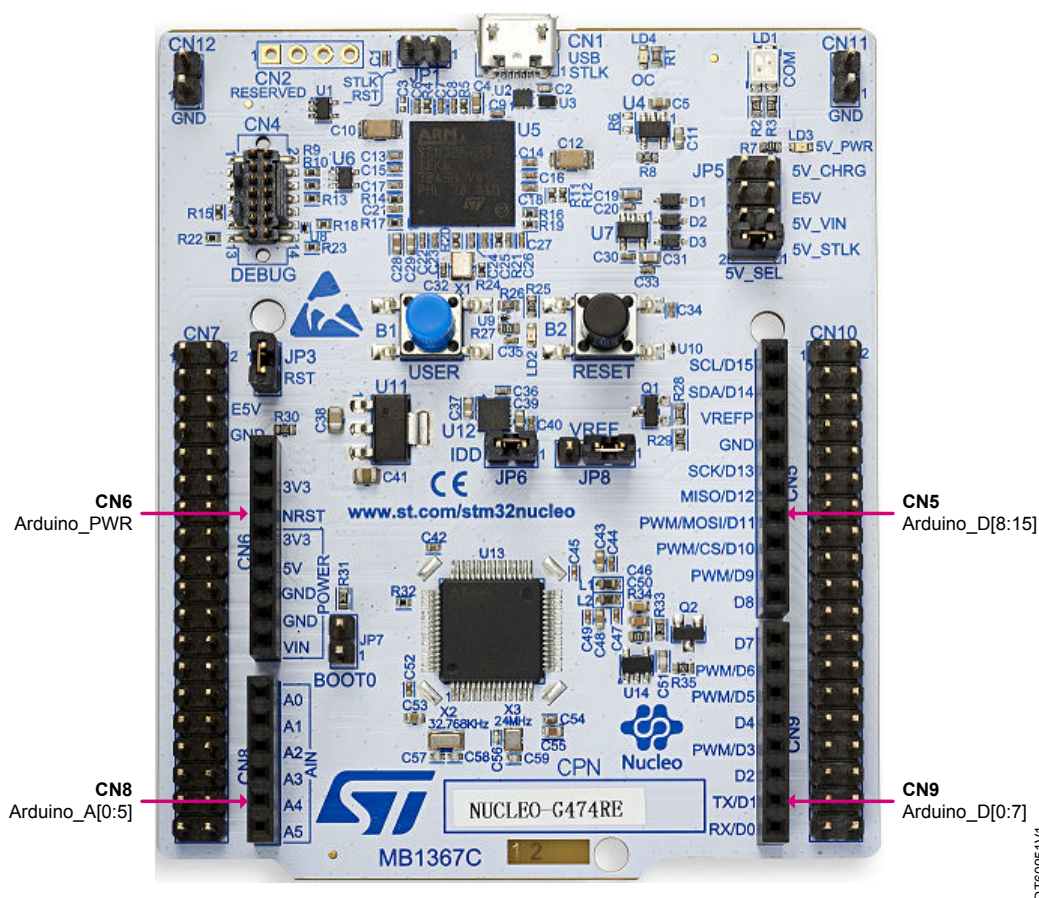Figure 17. ARDUINO® connectors


DT00951V1

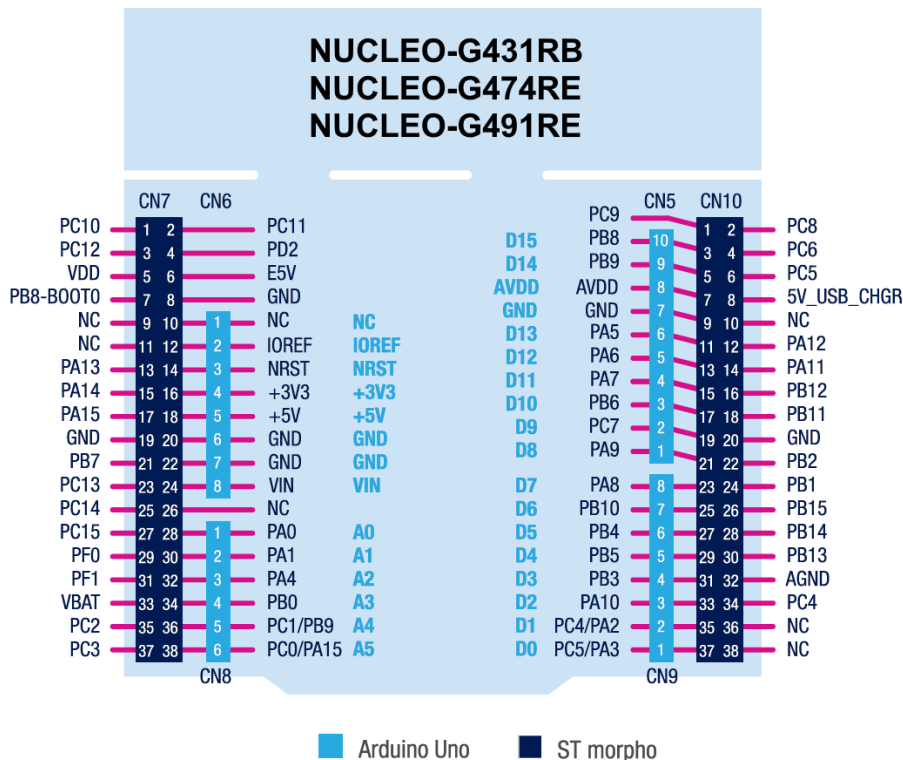Figure 18. ARDUINO® and ST morpho connectors pinout


Note: ARDUINO® Uno V3 D0 and D1 signals are connected by default on USART1 (MCU I/O PC4 and PC5). For details about how to modify the UART interface, refer to [Section 7.6.5: Virtual COM port \(VCP\): LPUART and USART](#).

Table 15. ARDUINO® connectors pinout


Connector	Pin number	Pin name	Signal name	STM32 pin ⁽¹⁾	Function ⁽¹⁾
CN6	1	NC	-	-	Reserved for test
	2	IOREF	-	-	I/O reference
	3	NRST	NRST	PG10-NRST	RESET
	4	3V3	-	-	3V3 input / output
	5	5V	-	-	5 V output
	6	GND	-	-	GND
	7	GND	-	-	GND
	8	VIN	-	-	7 V - 12 V input power
CN8	1	A0	ADC	PA0	ADC12_IN1
	2	A1	ADC	PA1	ADC12_IN2
	3	A2	ADC	PA4	ADC2_IN17
	4	A3	ADC	PB0	ADC3_IN12 or ADC1_IN15
	5	A4	ADC	PC1 / PB9	ADC12_IN7 / I2C1_SDA
	6	A5	ADC	PC0 / PA15	ADC12_IN6 / I2C1_SCL
CN5	10	SCL/D15	ARD_D15	PB8	I2C1_SCL

Connector	Pin number	Pin name	Signal name	STM32 pin ⁽¹⁾	Function ⁽¹⁾
CN5	9	SDA/D14	ARD_D14	PB9	I2C1_SDA
	8	VREFP	VREFP	VREF+	Voltage reference
	7	GND	-	-	GND
	6	SCK/D13	ARD_D13	PA5	SPI1_SCK
	5	MISO/D12	ARD_D12	PA6	SPI1_MISO
	4	PWM/MOSI/D11	ARD_D11	PA7	TIM3_CH2 / SPI1_MOSI
	3	PWM/CS/D10	ARD_D10	PB6	TIM4_CH1 / SPIx_CS
	2	PWM/D9	ARD_D9	PC7	TIM3_CH2 or TIM8_CH2
	1	D8	ARD_D8	PA9	I/O
CN9	8	D7	ARD_D7	PA8	I/O
	7	PWM/D6	ARD_D6	PB10	TIM2_CH3
	6	PWM/D5	ARD_D5	PB4	TIM3_CH1
	5	D4	ARD_D4	PB5	I/O
	4	PWM/D3	ARD_D3	PB3	TIM2_CH2
	3	D2	ARD_D2	PA10	I/O
	2	TX/D1	ARD_D1	PA2 / PC4	LPUSART1_TX / USART1_TX
	1	RX/D0	ARD_D0	PA3 / PC5	LPUSART1_RX / USART1_RX

1. Default configuration is in bold.

8.4 ST morpho connectors CN7 and CN10

ST morpho connectors CN7 and CN10 are male pin headers accessible on both sides of the board. All signals and power pins of the STM32G4 MCU are available on the ST morpho connectors. These connectors can also be probed by an oscilloscope, logical analyzer, or voltmeter.

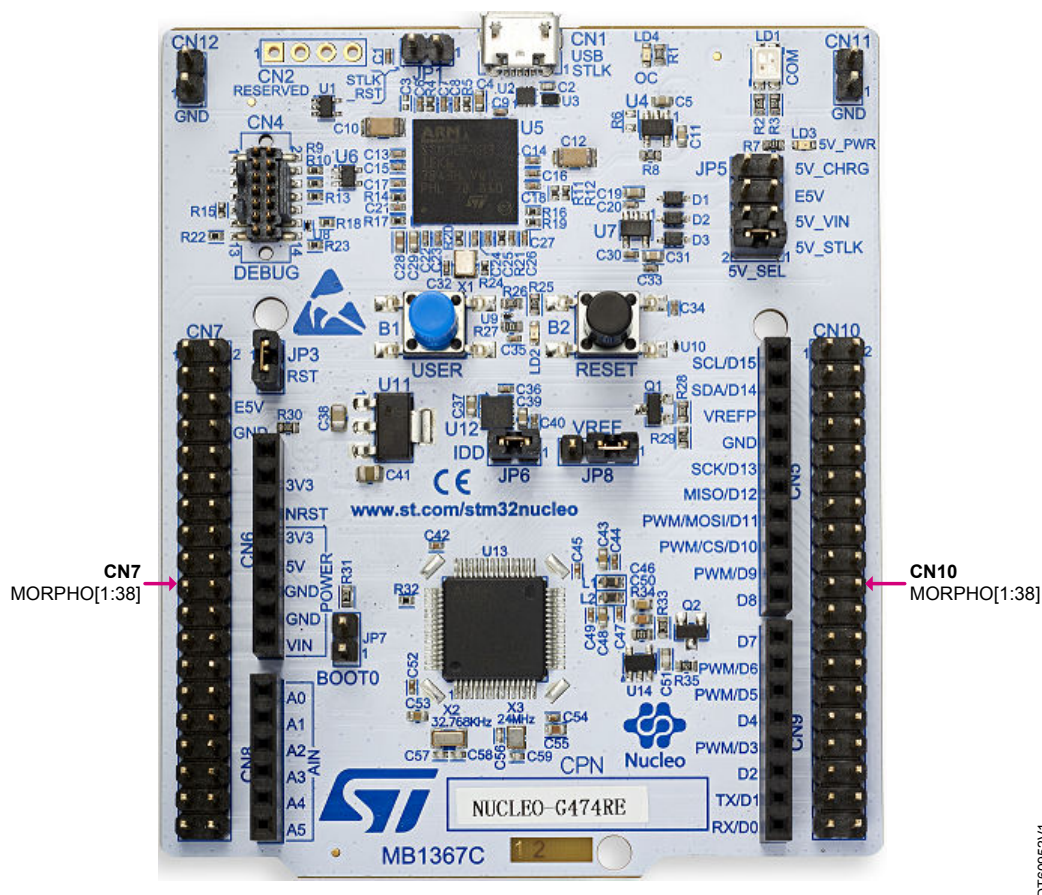Figure 19. ST morpho connectors


The pinout of ST morpho connectors CN7 and CN10 is shown in Figure 18. ARDUINO® and ST morpho connectors pinout.

Note: The D0 and D1 signals are connected by default to USART1 (MCU I/O PC4 and PC5). For details about how to modify the UART interface, refer to Section 7.6.5: Virtual COM port (VCP): LPUART and USART.

Table 16 shows the pin assignment of each STM32G4 I/O on the ST morpho connector.

Table 16. Pin assignment of the ST morpho connectors

CN7 odd pins		CN7 even pins		CN10 odd pins		CN10 even pins	
Pin nbr	Pin name	Pin nbr	Pin name ⁽¹⁾	Pin nbr	Pin name ⁽¹⁾	Pin nbr	Pin name
1	PC10	2	PC11	1	PC9	2	PC8
3	PC12	4	PD2	3	PB8	4	PC6
5	VDD	6	E5V	5	PB9	6	PC5
7	BOOT0 ⁽²⁾	8	GND	7	VREFP ⁽³⁾	8	5V_USB_CHGR ⁽⁴⁾
9	NC	10	NC	9	GND	10	NC
11	NC	12	IOREF	11	PA5	12	PA12
13	PA13 ⁽⁵⁾	14	NRST	13	PA6	14	PA11
15	PA14 ⁽⁵⁾	16	3V3	15	PA7	16	PB12
17	PA15	18	5V	17	PB6	18	PB11
19	GND	20	GND	19	PC7	20	GND

CN7 odd pins		CN7 even pins		CN10 odd pins		CN10 even pins	
Pin nbr	Pin name	Pin nbr	Pin name ⁽¹⁾	Pin nbr	Pin name ⁽¹⁾	Pin nbr	Pin name
21	PB7	22	GND	21	PA9	22	PB2
23	PC13	24	VIN	23	PA8	24	PB1
25	PC14	26	NC	25	PB10	26	PB15
27	PC15	28	PA0	27	PB4	28	PB14
29	PF0	30	PA1	29	PB5	30	PB13
31	PF1	32	PA4	31	PB3	32	AGND
33	VBAT	34	PB0	33	PA10	34	PC4
35	PC2	36	PC1 /PB9	35	PA2 / PC4	36	NC
37	PC3	38	PC0 /PA15	37	PA3 / PC5	38	NC

1. Default configuration in bold.
2. BOOT0 is not connected by default. The BOOT0 function is done by SW:
 - Option byte nSWBOOT0 must be set to 0 (in that case, BOOT0 is taken from the Option byte nBOOT0)
 - Option byte nBOOT0 must be set to 1 (in that case BOOT0 is active low).
 If nSWBOOT0 is set to 0, the BOOT0 is taken from pin PB8 / BOOT0.
3. AVDD connected to VREF+
4. 5V_USB_CHGR is the 5 V power from the STLINK-V3E USB connector that rises first. It rises before the 5 V rising on the board.
5. PA13 and PA14 are shared with SWD signals connected to STLINK-V3E. It is not recommended to use them as I/O pins.

9 STM32G4 Nucleo-64 I/O assignment

Table 17. Nucleo-64 I/O assignment

Pin	Pin name	Signal or label	Main feature / optional feature / (SB) ⁽¹⁾
1	VBAT	VBAT	VBAT voltage supply
2	PC13	PC13	USER button / I/O
3	PC14-OSC32_IN	OSC32_IN / PC14	LSE CLK / I/O
4	PC15-OSC32_OUT	OSC32_OUT / PC15	LSE CLK / I/O
5	PF0-OSC_IN	OSC_IN / PF0	HSE CLK / I
6	PF1-OSC_OUT	OSC_OUT / PF1	HSE CLK / O
7	PG10-NRST	T_NRST	STM32G4 RESET
8	PC0	PC0	ARD_A5 - ADC12_IN6
9	PC1	PC1	ARD_A4 - ADC12_IN7
10	PC2	PC2	I/O
11	PC3	PC3	I/O
12	PA0	PA0	ARD_A0 - ADC12_IN1 / User Button
13	PA1	PA1	ARD_A1 - ADC12_IN2
14	PA2	LPUART1_TX	ARD_D1 / STLINK_TX (T_VCP_TX)
15	VSS	GND	PWR GND
16	VDD	VDD	PWR VDD supply
17	PA3	LPUART1_RX	ARD_D0 / STLINK_RX (T_VCP_RX)
18	PA4	PA4	ARD_A2 - ADC2_IN17
19	PA5	PA5	ARD_D13 - SPI1_CLK
20	PA6	PA6	ARD_D12 - SPI1_MISO
21	PA7	PA7	ARD_D11 - TIM3_CH2 / SPI1_MOSI
22	PC4	PC4	I/O
23	PC5	PC5	I/O
24	PB0	PB0	ARD_A3 - ADC3_IN12
25	PB1	PB1	I/O
26	PB2	PB2	I/O
27	VSSA	AGND	AGND
28	VREF+	VREFP	Reference voltage supply
29	VDDA	AVDD	Analog voltage supply
30	PB10	PB10	ARD_D6 / TIM2_CH3
31	VSS	GND	GND
32	VDD	VDD	VDD voltage supply
33	PB11	PB11	I/O
34	PB12	PB12	I/O
35	PB13	PB13	I/O
36	PB14	PB14	I/O
37	PB15	PB15	I/O
38	PC6	PC6	I/O

Pin	Pin name	Signal or label	Main feature / optional feature / (SB) ⁽¹⁾
39	PC7	PC7	ARD_D9-TIM3_CH2 (or TIM8_CH2) / I/O
40	PC8	PC8	I/O
41	PC9	PC9	I/O
42	PA8	PA8	ARD_D7 - I/O
43	PA9	PA9	ARD_D8 - I/O
44	PA10	PA10	ARD_D2 - I/O
45	PA11	PA11	I/O
46	PA12	PA12	I/O
47	VSS	GND	GND
48	VDD	VDD	VDD voltage supply
49	PA13	T_SWDIO	T_SWDIO
50	PA14	T_SWCLK	T_SWCLK
51	PA15	T_JTDI	T_JTDI / I2C1_SCL
52	PC10	PC10	I/O
53	PC11	PC11	I/O
54	PC12	PC12	I/O
55	PD2	D2	I/O
56	PB3	PB3	ARD_D3 - TIM2_CH2 / T_SWO
57	PB4	PB4	ARD_D5 - TIM3_CH1 / I/O
58	PB5	PB5	ARD_D4 - I/O
59	PB6	PB6	ARD_D10 - SPIx_CS / TIM4_CH1
60	PB7	PB7	I/O
61	PB8-BOOT0	BOOT0	BOOT0
62	PB9	PB9	ARD_D14 - I2C1_SDA
63	VSS	GND	GND
64	VDD	VDD	VDD voltage supply

1. The default configuration is shown in bold.


10 STM32G4 Nucleo-64 product information

10.1 Product marking

The product and each board composing the product are identified with one or several stickers. The stickers, located on the top or bottom side of each PCB, provide product information:

- Main board featuring the target device: product order code, product identification, serial number, and board reference with revision.

Single-sticker example:

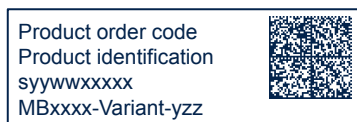


Dual-sticker example:



- Other boards if any: board reference with revision and serial number.

Examples:

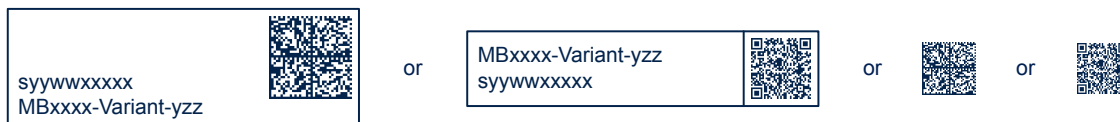

On the main board sticker, the first line provides the product order code, and the second line the product identification.

On all board stickers, the line formatted as “MBxxxx-Variant-yyz” shows the board reference “MBxxxx”, the mounting variant “Variant” when several exist (optional), the PCB revision “y”, and the assembly revision “zz”, for example B01. The other line shows the board serial number used for traceability.

Products and parts labeled as “ES” or “E” are not yet qualified or feature devices that are not yet qualified. STMicroelectronics disclaims any responsibility for consequences arising from their use. Under no circumstances will STMicroelectronics be liable for the customer's use of these engineering samples. Before deciding to use these engineering samples for qualification activities, contact STMicroelectronics' quality department.

“ES” or “E” marking examples of location:

- On the targeted STM32 that is soldered on the board (for an illustration of STM32 marking, refer to the STM32 datasheet *Package information* paragraph at the www.st.com website).
- Next to the ordering part number of the evaluation tool that is stuck, or silk-screen printed on the board.

Some boards feature a specific STM32 device version, which allows the operation of any bundled commercial stack/library available. This STM32 device shows a “U” marking option at the end of the standard part number and is not available for sales.

To use the same commercial stack in their applications, the developers might need to purchase a part number specific to this stack/library. The price of those part numbers includes the stack/library royalties.

10.2 STM32G4 Nucleo-64 product history

Table 18. Product history

Order code	Product identification	Product details	Product change description	Product limitations
NUCLEO-G431RB	NUG431RB\$AT1	MCU: • STM32G431RBT6 silicon revision "Z"	Initial revision	No limitation
		MCU errata sheet: • STM32G431xx/441xx device errata (ES0431)		
		Board: • MB1367-G431RB-C04 (main board)		
	NUG431RB\$AT2	MCU: • STM32G431RBT6 silicon revision "Y"	MCU silicon revision changed	No limitation
		MCU errata sheet: • STM32G431xx/441xx device errata (ES0431)		
		Board: • MB1367-G431RB-C04 (main board)		
	NUG431RB\$AT3	MCU: • STM32G431RBT6 silicon revision "X"	MCU silicon revision changed	No limitation
		MCU errata sheet: • STM32G431xx/441xx device errata (ES0431)		
		Board: • MB1367-G431RB-C04 (main board)		
	NUG431RB\$AT4	MCU: • STM32G431RBT6 silicon revision "X"	Packaging: plastic blister replaced by a carton box	No limitation
		MCU errata sheet: • STM32G431xx/441xx device errata (ES0431)		
		Board: • MB1367-G431RB-C04 (main board)		
NUCLEO-G474RE	NUG474RE\$AT1	MCU: • STM32G474RET6 silicon revision "Z"	Initial revision	Boards within the following range of serial numbers A191300001-A191304602 are impacted by the limitations described in Section 10.2.1 .
		MCU errata sheet: • STM32G471xx/473xx/474xx/483xx/484xx device errata (ES0430)		
		Board: • MB1367-G474RE-C04 (main board)		

Order code	Product identification	Product details	Product change description	Product limitations
NUCLEO-G474RE	NUG474RE\$AT2	MCU: • STM32G474RET6 silicon revision "Y"	MCU silicon revision changed	No limitation
		MCU errata sheet: • STM32G471xx/473xx/474xx/483xx/484xx device errata (ES0430)		
		Board: • MB1367-G474RE-C04 (main board)		
	NUG474RE\$AT3	MCU: • STM32G474RET6 silicon revision "X"	MCU silicon revision changed	No limitation
		MCU errata sheet: • STM32G471xx/473xx/474xx/483xx/484xx device errata (ES0430)		
		Board: • MB1367-G474RE-C04 (main board)		
	NUG474RE\$AT4	MCU: • STM32G474RET6 silicon revision "X"	Packaging: plastic blister replaced by a carton box	No limitation
		MCU errata sheet: • STM32G471xx/473xx/474xx/483xx/484xx device errata (ES0430)		
		Board: • MB1367-G474RE-C04 (main board)		
	NUG474RE\$CT1	MCU: • STM32G474RET6 silicon revision "X" or "2"	- Main board revision changed - Board sticker format changed	No limitation
		MCU errata sheet: • STM32G471xx/473xx/474xx/483xx/484xx device errata (ES0430)		
		Board: • MB1367-G474RE-D01 (main board)		
NUCLEO-G491RE	NUG491RE\$AT1	MCU: • STM32G491RET6 silicon revision "Z"	Initial revision	No limitation
		MCU errata sheet: • STM32G491xx/4A1xx device errata (ES0523)		
		Board: • MB1367-G491RE-C04 (main board)		

Order code	Product identification	Product details	Product change description	Product limitations
NUCLEO-G491RE	NUG491RE\$AT2	MCU: • STM32G491RET6 silicon revision "Z"	Packaging: plastic blister replaced by a carton box	No limitation
		MCU errata sheet: • STM32G491xx/4A1xx device errata (ES0523)		
		Board: • MB1367-G491RE-C04 (main board)		

10.2.1 NUG474RE\$AT1 known limitations

Issue observed

The OPAMP offset value is minimized using a trimming circuitry. At startup, the trimming values are initialized with the preset factory trimming values. The trimming values of OPAMP1, OPAMP2, and OPAMP4 are not programmed correctly, resulting in a large offset compared to the one specified.

Proposed workaround

The offset values of OPAMP1, OPAMP2, and OPAMP4 must be calibrated by software, applying the calibration procedure described in the *STM32G4 series advanced Arm®-based 32-bit MCUs* reference manual (RM0440), in the *Calibration* section of the *Operational amplifiers (OPAMP)* chapter. Such a procedure is already implemented in the STM32CubeG4 MCU Package.

10.3 Board revision history

Table 19. Board revision history

Board reference	Board variant and revision	Board change description	Board limitations
MB1367 (main board)	G431RB-C04	Initial revision	No limitation
	G474RE-C04	Initial revision	No limitation
	G474RE-D01	Several part references updated due to obsolescence, such as the STMICROELECTRONICS ESDALC6V1-1U2 diode, replaced by STMICROELECTRONICS ESDZL5-1F4, with impact on the PCB. Refer to the bill of materials for further details.	No limitation
	G491RE-C04	Initial revision	No limitation

11 Compliance statements and conformity declarations

11.1 Federal Communications Commission (FCC) compliance statement

Part 15.19

These devices comply with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) these devices may not cause harmful interference, and (2) these devices must accept any interference received, including interference that may cause undesired operation.

Part 15.21

Any changes or modifications to this equipment not expressly approved by STMicroelectronics may cause harmful interference and void the user's authority to operate this equipment.

Part 15.105

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Use only shielded cables.

Responsible Party - U.S. Contact Information:

Francesco Doddo
STMicroelectronics, Inc.
200 Summit Drive | Suite 405 | Burlington, MA 01803
USA
Telephone: +1 781-472-9634

11.2 Innovation, Science and Economic Development Canada (ISED) compliance statement

These products comply with the ICES-003 standard class B of the ISED regulation.

ISED Canada ICES-003 Compliance Label: CAN ICES (B)/NMB (B).

Note: Use only shielded cables.

Ces produits sont conformes à la norme NMB-003 classe B de la ISDE.

Étiquette de conformité à la NMB-003 d'ISDE Canada : CAN ICES (B) / NMB (B).

Note: Utiliser uniquement des câbles blindés.

11.3 UKCA conformity

Simplified UK declaration of conformity

Hereby, the manufacturer STMicroelectronics, declares that the equipment types "NUCLEO-G431RB", "NUCLEO-G474RE", and "NUCLEO-G491RE" are in compliance with the UK Electromagnetic Compatibility Regulations 2016 (UK SI 2016 No. 1091) and with the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (UK SI 2012 No. 3032).

Note: Use only shielded cables.

11.4 CE conformity

11.4.1 Simplified EU declaration of conformity

Hereby, STMicroelectronics declares that the equipment types "NUCLEO-G431RB", "NUCLEO-G474RE", and "NUCLEO-G491RE" are in compliance with directives 2011/53/EU and 2015/863/EU (RoHS), and 2014/30/EU (EMC).

- Note:*
- *RoHS: Restriction of hazardous substances*
 - *EMC: Electromagnetic compatibility*

Note: Use only shielded cables.

11.4.2 Déclaration de conformité UE simplifiée

STMicroelectronics déclare que les équipements électriques des types "NUCLEO-G431RB", "NUCLEO-G474RE" et "NUCLEO-G491RE" sont conformes aux directives 2011/53/UE et 2015/863/UE (LdSD), et à la directive 2014/30/UE (CEM).


- Note:*
- *LdSD : directive sur la limitation de l'utilisation des substances dangereuses*
 - *CEM : compatibilité électromagnétique*

Note: Utiliser uniquement des câbles blindés.

12 Product disposal

Disposal of this product: WEEE (Waste Electrical and Electronic Equipment)

(Applicable in Europe)

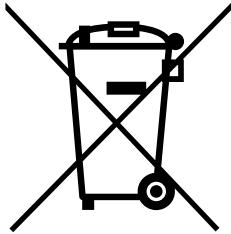

This symbol on the product, accessories, or accompanying documents indicates that the product and its electronic accessories must not be disposed of with household waste at the end of their working life.

To prevent possible harm to the environment and human health from uncontrolled waste disposal, separate these items from other types of waste and recycle them responsibly at a designated collection point to promote the sustainable reuse of material resources.

Household users:

Contact the retailer that you purchased the product from or your local authority for details of your nearest designated collection point.

Business users:

Contact your dealer or supplier for further information.

Revision history

Table 20. Document revision history

Date	Revision	Changes
28-Mar-2019	1	Initial release.
17-Apr-2019	2	Added the <i>Limitation</i> section.
26-Nov-2020	3	Extended the document scope to the NUCLEO-G491RE board: updated sections <i>Introduction</i> , <i>Features</i> , <i>Ordering information</i> , and <i>Development environment</i> . Added the <i>STM32G4 Nucleo-64 board information</i> section.
11-Feb-2021	4	Updated the <i>Embedded STLINK-V3E</i> section. Updated the <i>STM32G4 Nucleo-64 product information</i> chapter.
22-Sep-2025	5	Updated System requirements , STM32G4 Nucleo-64 product information , and Federal Communications Commission (FCC) and ISED Canada Compliance Statements. Added Safety recommendations , UKCA conformity, CE conformity, and Product disposal . Minor text edits across the document.
08-Dec-2025	6	Updated: Section 5: Safety recommendations Table 18. Product history Table 19. Board revision history Section 11: Compliance statements and conformity declarations
21-May-2026	7	Updated: Features Table 12. Solder bridge configuration

Contents

1	Features	2
2	Ordering information	3
2.1	Codification	3
3	Development environment	4
3.1	System requirements	4
3.2	Development toolchains	4
3.3	Demonstration software	4
3.4	EDA resources	4
4	Conventions	5
5	Safety recommendations	6
5.1	Targeted audience	6
5.2	Handling the board	6
5.3	Delivery recommendations	6
5.4	Power supply	6
6	Quick start	7
6.1	Getting started	7
7	Hardware layout and configuration	8
7.1	PCB layout	9
7.2	Mechanical drawing	11
7.3	Embedded STLINK-V3E	11
7.3.1	Drivers	12
7.3.2	STLINK-V3E firmware upgrade	12
7.3.3	Using an external debug tool to program and debug the on-board STM32	13
7.4	Power supply	14
7.4.1	Debugging while using VIN or EXT as an external power supply	22
7.5	Clock sources	22
7.5.1	HSE clock (high-speed external clock)	22
7.5.2	LSE clock (low-speed external clock) – 32.768 kHz	23
7.6	Board functions	23
7.6.1	LEDs	23
7.6.2	Push-buttons	23
7.6.3	MCU voltage selection on VREF+	24
7.6.4	Current consumption measurement (IDD)	24
7.6.5	Virtual COM port (VCP): LPUART and USART	24

7.7	Solder bridges	25
8	Board connectors	28
8.1	STLINK-V3E USB Micro-B connector CN1	28
8.2	MIPI10 connector CN4	28
8.3	ARDUINO® Uno V3 connectors CN5, CN6, CN8 and CN9	29
8.4	ST morpho connectors CN7 and CN10	31
9	STM32G4 Nucleo-64 I/O assignment	34
10	STM32G4 Nucleo-64 product information	36
10.1	Product marking	36
10.2	STM32G4 Nucleo-64 product history	37
10.2.1	NUG474RE\$AT1 known limitations	39
10.3	Board revision history	39
11	Compliance statements and conformity declarations	40
11.1	Federal Communications Commission (FCC) compliance statement	40
11.2	Innovation, Science and Economic Development Canada (ISED) compliance statement ..	40
11.3	UKCA conformity	40
11.4	CE conformity	41
11.4.1	Simplified EU declaration of conformity	41
11.4.2	Déclaration de conformité UE simplifiée	41
12	Product disposal	42
	Revision history	43
	List of tables	46
	List of figures	47

List of tables

Table 1.	List of available products.	3
Table 2.	Codification explanation	3
Table 3.	ON/OFF convention	5
Table 4.	Jumper configuration	7
Table 5.	MIPI10/STDC14 debug connector (CN4).	13
Table 6.	External power sources: VIN (7 V - 12 V)	17
Table 7.	External power sources: E5V (5 V).	19
Table 8.	External power sources: 5V_CHGR (5 V)	20
Table 9.	External power sources: 3V3.	21
Table 10.	USART1 connection.	24
Table 11.	LPUART1 connection	24
Table 12.	Solder bridge configuration	25
Table 13.	USB Micro-B connector CN1 pinout	28
Table 14.	MIPI10 connector CN4 pinout (STDC14 pinout compatible).	29
Table 15.	ARDUINO® connectors pinout.	30
Table 16.	Pin assignment of the ST morpho connectors	32
Table 17.	Nucleo-64 I/O assignment.	34
Table 18.	Product history	37
Table 19.	Board revision history	39
Table 20.	Document revision history	43

List of figures

Figure 1.	NUCLEO-G474RE top view	1
Figure 2.	NUCLEO-G474RE bottom view	1
Figure 3.	Hardware block diagram	8
Figure 4.	Top layout	9
Figure 5.	Bottom layout	10
Figure 6.	STM32G4 Nucleo 64 board mechanical drawing (in millimeter)	11
Figure 7.	USB composite device.	12
Figure 8.	Connecting an external debug tool to program the on-board STM32G4	13
Figure 9.	STM32G4 Nucleo-64 board power tree	15
Figure 10.	Power supply input from STLINK-V3E USB connector with PC (5 V, 500 mA max)	16
Figure 11.	Power supply input from VIN (7 V - 12 V, 800 mA max)	18
Figure 12.	Power supply input from 5V_EXT (5 V, 500 mA max).	19
Figure 13.	Power supply input from ST-LINK USB connector with USB charger (5 V)	20
Figure 14.	Power supply input from external 3V3	21
Figure 15.	USB Micro-B connector CN1 (front view)	28
Figure 16.	MIPI10 connector CN4	28
Figure 17.	ARDUINO® connectors	29
Figure 18.	ARDUINO® and ST morpho connectors pinout	30
Figure 19.	ST morpho connectors	32

IMPORTANT NOTICE – READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice.

In the event of any conflict between the provisions of this document and the provisions of any contractual arrangement in force between the purchasers and ST, the provisions of such contractual arrangement shall prevail.

The purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgment.

The purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of the purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

If the purchasers identify an ST product that meets their functional and performance requirements but that is not designated for the purchasers' market segment, the purchasers shall contact ST for more information.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, refer to www.st.com/trademarks. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2026 STMicroelectronics – All rights reserved